

1	PMZ50-M5-B-001	M3-50QT-002001	车架	Frame	1
2	PMZ50-M5-B-002	M3-50QT-002002	动力吊架	Engine Mount	1
3	PMZ50-M5-B-003	M3-50QT-002003	吊架胶	Rubber Cussion of Hanger	1
4	PMZ50-M5-B-004	GB/T5789-M10×1.25×200	吊架轴M10×1.25×200	Engine Mount Bolt, M10×1.25×200	1
5	PMZ50-M5-B-005	GB6187-M10	自锁螺母M10	Flange Lock Nut, M10	3
6	PMZ50-M5-B-006	GB/T5789-M10×70	六角法兰面螺栓M10×110	Hex flange step bolt M10×110	1
7	PMZ50-M5-B-007	GB6187-M8	自锁螺母M8	Lock Nut M8	2
8	PMZ50-M5-B-008	M3-50QT-002004	右脚蹬组合	R.Foot rest Assy	1
9	PMZ50-M5-B-009	M3-50QT-002005	左脚蹬组合	L.Foot rest Assy	1
10	PMZ50-M5-B-010	GB/T5789-M8×40	六角法兰面螺栓M8×40	Hex flange step bolt M8×40	1
11	PMZ50-M5-B-011	GB/T5789-M12×60	六角法兰面螺栓M12×60	Hex flange step bolt M12×60	2
12	PMZ50-M5-B-012	M3-50QT-002006	侧支架	Side Stand Assy	1
13	PMZ50-M5-B-013	M3-50QT-002007	侧支架弹簧	Spring, Side Stand	1
14	PMZ50-M5-B-014	M3-50QT-002008	侧支架螺栓M8×φ10X20	Step Bolt	1
15	PMZ50-M5-B-015	M3-50QT-002009	车架后堵头胶	Rubber plug of frame	2
16	PMZ50-M5-B-016	GB/T5789-M8×50	六角法兰面螺栓M8×50	Hex flange step bolt M8×50	1



1	PMZ50-M5-C-001	M3-50QT-003001	右组合开关	R.Hand Switch Assy	1
2	PMZ50-M5-C-002	M3-50QT-003002	右把手套（油门转把）	R.Throttle grip	1
3	PMZ50-M5-C-003	M3-50QT-003003	方向把	Handle Comp	1
4	PMZ50-M5-C-004	M3-50QT-003004	右后视镜组件	R . Rear Mirror	1
5	PMZ50-M5-C-005	M3-50QT-003005	左后视镜组件	L. Rear Mirror	1
6	PMZ50-M5-C-006	M3-50QT-003006	左把手套	L.Grip	1
7	PMZ50-M5-C-007	M3-50QT-003007	左组合开关	L.Hand Switch Assy	1
8	PMZ50-M5-C-008	M3-50QT-003008	左闸把	L.Brake Lever	1
9	PMZ50-M5-C-009	M3-50QT-003009	方向把压块	Handle bar block	2
10	PMZ50-M5-C-010	GB70.1 M8x25	圆柱头内六角螺栓 M8×25	Hexagon socket head cap bolt M8×25	4
11	PMZ50-M5-C-011	M3-50QT-003010	方向把压块胶垫	Rubber plate of Block	4
12	PMZ50-M5-C-012	GB96 8	平垫φ8	Cussion φ8	2
13	PMZ50-M5-C-013	GB6177 M8	螺母M8	Nut M8	2
14	PMZ50-M5-C-014	M3-50QT-003011	油门线（总长 1350mm，行程 95mm）	Throttle cable	1



1	PMZ50-M5-D-001	M3-50QT-004001	油箱	Fuel Tank Assy	1
2	PMZ50-M5-D-002	GB96 6	平垫φ 6	Cussion φ6	2
3	PMZ50-M5-D-003	M3-50QT-004002	油箱后胶圈	Rubber O ring on Fuel Tank	2
4	PMZ50-M5-D-004	GB/T5789-M6x25	六角法兰面螺栓M6 ×25	Hex flange step bolt M6x25	2
5	PMZ50-M5-D-005	M3-50QT-004003	油箱盖外罩	Fuel tank cap outer cover	1
6	PMZ50-M5-D-006	M3-50QT-004004	油箱盖内罩	Fuel tank cap inner cover	1
7	PMZ50-M5-D-007	M3-50QT-004005	油箱盖	Fuel tank cap	1
8	PMZ50-M5-D-008	GB6177-M6	六角法兰面螺母M6	Hex flange step Nut m6	1
9	PMZ50-M5-D-009	M3-50QT-004006	油箱下胶垫（加衬 套）	Rubber cussion under fuel tank	2
10	PMZ50-M5-D-010	M3-50QT-004007	油箱前胶圈	Rubber O ring on Fuel Tank	1
11	PMZ50-M5-D-011	GB/T5789-M6x60	六角法兰面螺栓M6 ×60	Hex flange step bolt M6x60	1
12	PMZ50-M5-D-012	M3-50QT-004008	传感器密封圈	Oil Seal Gasket for Sensor	1
13	PMZ50-M5-D-013	GB6177-M6	六角法兰面螺母M6	Hex flange step Nut m6	4
14	PMZ50-M5-D-014	M3-50QT-004009	汽油传感器组件	Fuel Level Sensor Comp.	1
15	PMZ50-M5-D-015		自攻螺纹夹片φ 4.2		6
16	PMZ50-M5-D-016	GB/T5789-M6x12	六角法兰面螺栓M6 ×12	Hex flange step bolt M6x12	2



 
1	PMZ50-M5-E-001	M3-50QT-005001	右前减震器	R Front Shock Absorber	1
2	PMZ50-M5-E-002	M3-50QT-005002	左前减震器	L. Front Shock Absorber	1
3	PMZ50-M5-E-003	M3-50QT-005003	上联板	Upper Bridge Assy	1
4	PMZ50-M5-E-004	GB70.1 M8x25	圆柱头内六角螺栓 M8x25	Hexagon socket head cap bolt M8x25	2
5	PMZ50-M5-E-005	M3-50QT-005004	电门锁板	Lock Plate	1

6	PMZ50-M5-E-006	GB/T5789-M6×12	六角法兰面螺栓M6×12	Hexagon socket head cap bolt M6×12	2
7	PMZ50-M5-E-007	GB/T69-2000	十字沉头螺栓 M6X12	Hex flange step bolt M6×12	2
8	PMZ50-M5-E-008	M3-50QT-005005	套锁	Lock sets	1
9	PMZ50-M5-E-009	M3-50QT-005006	前轮挡泥板	Front Fender	1
10	PMZ50-M5-E-010	GB818 M6×12	十字小扁头螺栓 M6X12(镀铬)	Hex flange step bolt M6×12	6
11	PMZ50-M5-E-011	M3-50QT-005007	下联板	Lower Bridge Assy	1
12	PMZ50-M5-E-012	M3-50QT-005008	胶垫	Rubber Cussion	1
13	PMZ50-M5-E-013	钢碗91603/27X (套)	钢碗91603/27X (套)	Steel Ball Bowl Assy91603/27X	1
14	PMZ50-M5-E-014	钢碗91603/26X (套)	钢碗91603/26X (套)	Steel Ball Bowl Assy91603/26X	1
15	PMZ50-M5-E-015	M3-50QT-005009	垫片Φ 26.5×Φ 36×2	Washer Φ26.5×Φ36×2	1
16	PMZ50-M5-E-016	M3-50QT-005010	锁紧螺母M26	Lock Nut M6	1
17	PMZ50-M5-E-017	M3-50QT-005011	六角盖型螺母M24	M24	1
18	PMZ50-M5-E-018	GB70.1 M8×25	圆柱头内六角螺栓 M8x25	Hexagon socket head cap bolt M8x25	4
19	PMZ50-M5-E-019	M3-50QT-005012	前刹车线/里程线夹	Front Brake cable	2
20	PMZ50-M5-E-020	GB/T5789-M6×12	六角法兰面螺栓M6×12	Flange Bolt, M6×12	2



1	PMZ50-M5-F-001	M3-50QT-006001	轴M12×245	Bolt, M12×245	1
2	PMZ50-M5-F-002	M3-50QT-006002	前轮辋2.75-12/(碟刹铝轮)	Rim, Front Wheel 2.75-12(Alu, disc break)	1
3	PMZ50-M5-F-003	M3-50QT-006003	前轮胎 120/70-12	Tyre, Front Wheel 120/70-12	1
4	PMZ50-M5-F-004	M3-50QT-006004	气门嘴	Tubeless Valve	1
5	PMZ50-M5-F-005	M3-50QT-006005	气门嘴盖	Cap, Tubeless Valve	1
6	PMZ50-M5-F-006	M3-50QT-006006	计速器	Speedometer Clutch	1
8	PMZ50-M5-F-007	M3-50QT-006007	衬套φ 12×φ 20×30	Collar, φ12×φ20×30	1
9	PMZ50-M5-F-008	GB/T6187.1-M12	自锁螺母M12	Flange Lock Nut, M12	1


10	PMZ50-M5-F-009	M3-50QT-006008	隔套 ($\phi 12 \times \phi 18 \times 73.5$)	Bush ($\phi 12 \times \phi 18 \times 73.5$)	1
11	PMZ50-M5-F-010	M3-50QT-006009	深沟球轴承6031 ($\phi 12 \times \phi 37 \times 12$)	Bearing 6031 ($\phi 12 \times \phi 37 \times 12$)	2
12	PMZ50-M5-F-011	M3-50QT-006010	油封 $\phi 23-\phi 37-7$	Oil seal , $\phi 23-\phi 37-7$	1

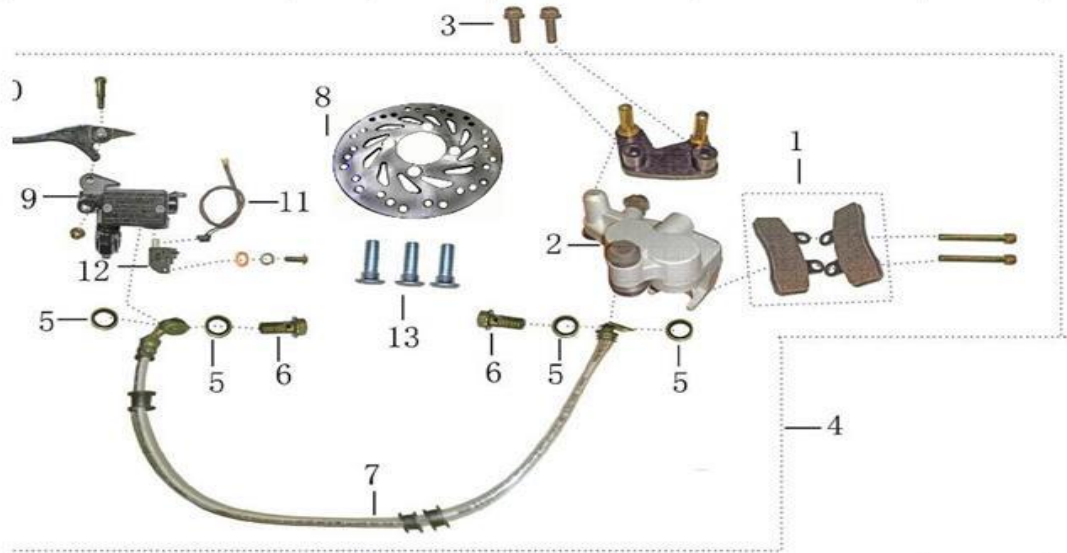

1	PMZ50-M5-G-001	M3-50QT-007001	摩擦片组件 double	Brake Plate Assy, Front Brake double	1
2	PMZ50-M5-G-002	M3-50QT-007002	前刹下泵 double	double	1
3	PMZ50-M5-G-003	GB/T5789-M8x30	六角法兰面螺栓M8×30	Bolt, M8x30	2
4	PMZ50-M5-G-004	M3-50QT-007003	前制动器总成 double	Front Hydraulic Brake System double	1
5	PMZ50-M5-G-005	M3-50QT-007004	铜垫片	Copper Washer	4
6	PMZ50-M5-G-006	M3-50QT-007005	油管连接螺栓	Connect Bolt, Hose, Front Brake	2
7	PMZ50-M5-G-007	M3-50QT-007006	液压油管 (820mm)	Hydraulic Hose, Front Brake	1
8	PMZ50-M5-G-008	M3-50QT-007007	前制动盘 $\phi 220 \times 3.5\text{mm}$	Brake Disc. Assy, Front Wheel, $\phi 220 \times 3.5\text{mm}$	1
9	PMZ50-M5-G-009	M3-50QT-007008	前刹上泵	Front Hydraulic Cylinder Comp	1
10	PMZ50-M5-G-010	M3-50QT-007009	前制动手柄	Lever, Right Handle	1
11	PMZ50-M5-G-011	M3-50QT-007010	碟刹开关线	Wire Cable, Brake Switch	1
12	PMZ50-M5-G-012	M3-50QT-007011	前碟刹开关	Switch, Front Brake	1
13	PMZ50-M5-G-013	GB/T2672-M8x25	内六角螺栓M8×25	Inner Hex Bolt, M8x25	3



1	PMZ50-M5-H-001	M3-50QT-008001	后轮辋2.75-12(铝 轮)	Rim, Rear Wheel 2.75-12	1
2	PMZ50-M5-H-002	M3-50QT-008002	后轮胎120/70-12	Tyre, Rear Wheel 120/70-12	1
3	PMZ50-M5-H-003	M3-50QT-008003	气门嘴	Tubeless Valve	1
4	PMZ50-M5-H-004	M3-50QT-008004	气门嘴盖	Cap, Tubeless Valve	1
5	PMZ50-M5-H-005	GB/T6187.1-M16	自锁螺母M16	Flange Lock Nut, M16	1

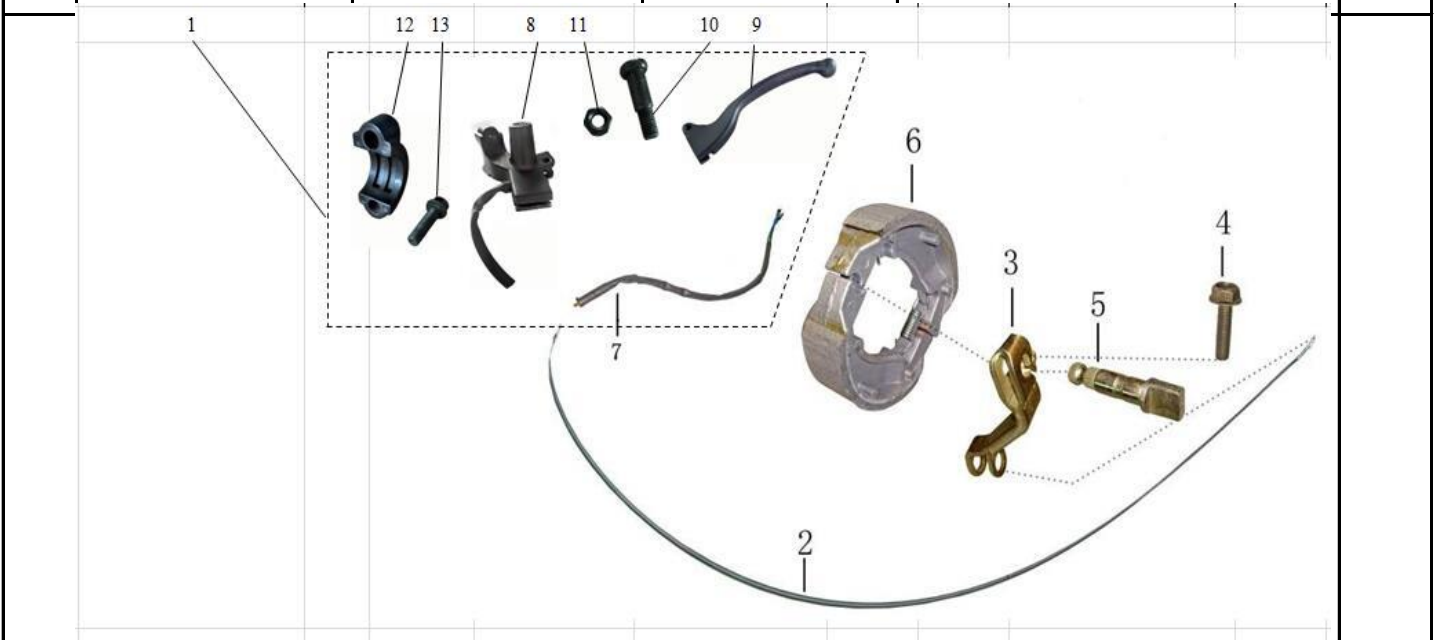 


1	PMZ50-M5-I-001	M3-50QT-003008	后制动手柄组件	Holder Assy, Rear Brake Lever	1
2	PMZ50-M5-I-002	M3-50QT-009002	后制动拉索组件 (1700mm55mm)上部 带防尘套	Cable, Rear Brake	1
3	PMZ50-M5-I-003	M3-50QT-009003	后制动摇臂	Rocker Arm, Rear Brake	1

4	PMZ50-M5-I-004	GB/T5789-M6×35	六角法兰面螺栓 M6×35	Flange Bolt, M6×35	1
5	PMZ50-M5-I-005	M3-50QT-009004	后制动摇臂轴		1
6	PMZ50-M5-I-006	M3-50QT-009005	刹车蹄块组件	Brake Shoes Set, Rear Brake	1
7	PMZ50-M5-I-007	M3-50QT-009006	后刹车开关组件	Switch, Rear Brake	1
8	PMZ50-M5-I-008	M3-50QT-009007	后制动手柄固定座	Holder Assy, Rear Brake Lever	1
9	PMZ50-M5-I-009	M3-50QT-009008	后刹手柄	Rear Brake Lever	1
10	PMZ50-M5-I-010	M3-50QT-009009	后制动手柄固定螺钉 M5×25	Bolt, Rear Brake Lever M5×25	1
11	PMZ50-M5-I-011	GB/T6184-M5	六角锁紧螺母 GB/T6184-M5	Hex Lock Nut, M5	1
12	PMZ50-M5-I-012	M3-50QT-009010	后制动手柄固定压块	Fixing Plate, Rear Brake Lever	1
13	PMZ50-M5-I-013	GB/T5787-M6×20	六角法兰面螺栓M6 ×20	Flange Bolt, M6×20	1



2	PMZ50-M5-J-002	M3-50QT-010002	座垫锁拉索(总长 430mm, 行程53mm)	Seat Cable	1
3	PMZ50-M5-J-003	M3-50QT-010003	座垫锁	Seat Lock set	1
4	PMZ50-M5-J-004	GB/T5789-M6×12	六角法兰面螺栓M6 ×12	Hexagon socket head Bolt M6× 12	2
5	PMZ50-M5-J-005	M3-50QT-010004	座垫锁盒	Seat Lock's Box	1
6	PMZ50-M5-J-006	M3-50QT-010005	座垫锁内胶圈	Seat Lock's Rubber O Ring	1
7	PMZ50-M5-J-007	M3-50QT-010006	翻边衬套φ6	Collar φ6	1
8	PMZ50-M5-J-008	GB/T5789-M6×25	六角法兰面螺栓M6 ×25	Hexagon socket head Bolt M6× 25	1
9	PMZ50-M5-J-009		夹片ST4.2	Clip ST4.2	1

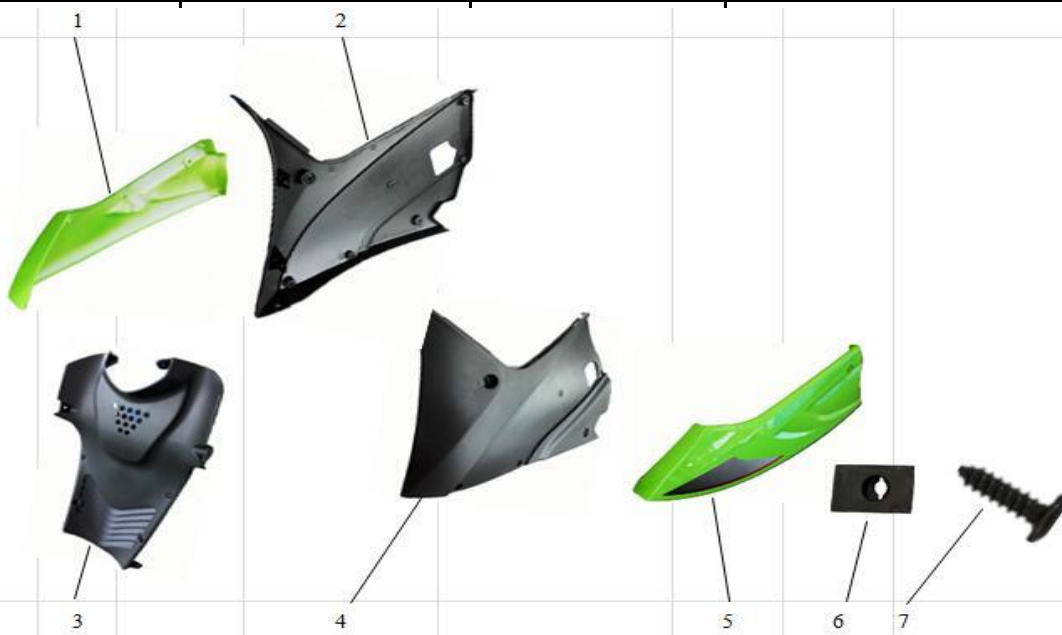 


1	PMZ50-M5-K-001	M3-50QT-011001	电池盒装饰盖 (右) (8832)	Decorating Panel of Battery Box(R)(BLACK)	1
				Decorating Panel of Battery Box(R) (WHITE)	
				Decorating Panel of Battery Box(R)(NEON GREEN)	
				Decorating Panel of Battery Box(R)(RED)	
2	PMZ50-M5-K-002	M3-50QT-011002	电池盒罩 (右) (8831)	Cover of Battery Box(R)	1
3	PMZ50-M5-K-003	M3-50QT-011003	前挡泥板	Front Fender	1
4	PMZ50-M5-K-004	M3-50QT-011004	电池盒罩 (左) (8831)	Cover of Battery Box(L)	1
5	PMZ50-M5-K-005	M3-50QT-011005	电池盒装饰盖 (左) (8832)	Decorating Panel of Battery Box(L)(BLACK)	1
				Decorating Panel of Battery Box(L) (WHITE)	
				Decorating Panel of Battery Box(L)(NEON GREEN)	
				Decorating Panel of Battery Box(L)(RED)	
6	PMZ50-M5-K-006	GB/T5789-M6×16	法兰螺栓M6×16	Flange Bolt, M6×16	1
7	PMZ50-M5-K-007	GB/T845-ST4.2×12	自攻螺钉ST4.2× 12	Screw ST4.2×12	2



1	PMZ50-M5-L-001	M3-50QT-012001	右侧盖前连接条 (8809)	Right side cover front connect plate	1
2	PMZ50-M5-L-002	M3-50QT-012002	侧盖 (右) (8802)	Side Cover(R)(BLACK) Side Cover(R)(WHITE) Side Cover(R)(NEON GREEN) Side Cover(R)(RED)	1
3	PMZ50-M5-L-003	M3-50QT-012003	电池盒上右连接条 (8830)	Right connect plate on Battery box(BLACK) Right connect plate on Battery box (WHITE) Right connect plate on Battery box(NEON GREEN) Right connect plate on Battery box(RED)	1
4	PMZ50-M5-L-004	M3-50QT-012004	座垫锁盖 (右) (8806)	Seat Lock's cover (R) (BLACK) (WHITE) Seat Lock's cover (R)(NEON GREEN) Seat Lock's cover (R)(RED)	1
5	PMZ50-M5-L-005	M3-50QT-012005	右侧盖下连接条 (8829)	Right side cover bottom connect plate	1
6	PMZ50-M5-L-006	M3-50QT-012006	侧盖右装饰条 (8803)	Right Decorating plate of Right side	1
7	PMZ50-M5-L-007	M3-50QT-012007	左侧盖下连接条 (8829)	Left side cover bottom connect plate	1
8	PMZ50-M5-L-008	M3-50QT-012008	右侧盖装饰板 (8811)	Decorating Panel of Right cover	1
9	PMZ50-M5-L-009	M3-50QT-012009	左侧盖前连接条 (8809)	Left side cover front connect plate	1
10	PMZ50-M5-L-010	M3-50QT-012010	侧盖 (左) (8802)	Side Cover(L)(BLACK) Side Cover(L)(WHITE)	1

				Side Cover(L)(NEON GREEN)	
				D Side Cover(L)(RED)	
11	PMZ50-M5-L-011	M3-50QT-012011	左侧盖装饰板 (8811)	Decorating Panel of Left cover	1
12	PMZ50-M5-L-012	M3-50QT-012012	电池盒上左连接条 (8830)	Left connect plate on Battery box(BLACK)	1
				Left connect plate on Battery box (WHITE)	
				Left connect plate on Battery box(NEON GREEN)	
				Left connect plate on Battery box(RED)	
13	PMZ50-M5-L-013	M3-50QT-012013	侧盖左装饰条 (8803)	Left Decorating plate of Right side	1
14	PMZ50-M5-L-014	M3-50QT-012014	座垫锁盖 (左) (8806)	Seat Lock's cover (I)(BLACK)	1
				(WHITE)	
				Seat Lock's cover (I)(NEON GREEN)	
				Seat Lock's cover (I)(RED)	
15	PMZ50-M5-L-015		夹片4.2mm	Clamp, 4.2mm	9
16	PMZ50-M5-L-016	GB/T845-ST4.8×16	自攻螺钉ST4.8× 16	Screw, Tapping ST4.8×16	2
17	PMZ50-M5-L-017	GB/T845-ST4.2×12	自攻螺钉ST4.2× 12	Screw, Tapping ST4.2×12	44

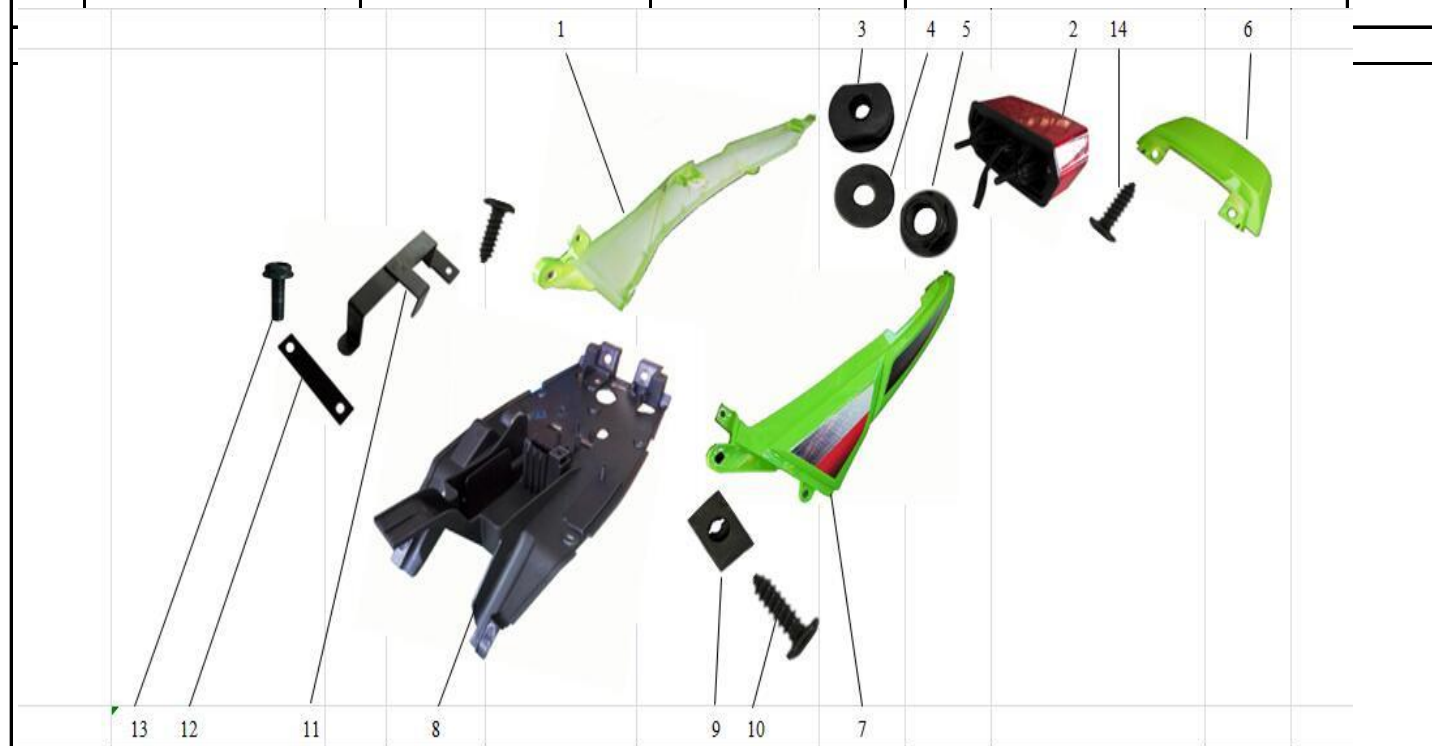 

1	PMZ50-M5-M-001	M3-50QT-013001	右尾罩(8804)	Right Taillight cover(BLACK)	1
				Right Taillight cover (WHITE)	
				Right Taillight cover(NEON GREEN)	
				Right Taillight cover(RED)	
2	PMZ50-M5-M-002	M3-50QT-013002	尾灯	Taillight Assy	1
3	PMZ50-M5-M-003	M3-50QT-013003	尾灯胶垫	Rubber mate of Taillight	2


4	PMZ50-M5-M-004	GB96 6	平垫φ 6	collar φ6	2
5	PMZ50-M5-M-005	GB6177 M6	六角法兰面螺母M6	Flange M6	2
6	PMZ50-M5-M-006	M3-50QT-013004	尾罩 (8805)	Taillight Cover(BLACK)	1
				Taillight Cover (WHITE)	
				Taillight Cover(NEON GREEN)	
				Taillight Cover(RED)	
7	PMZ50-M5-M-007	M3-50QT-013005	左尾罩(8804)	Left Taillight cover(BLACK)	4
				Left Taillight cover (WHITE)	
				GREEN)	
				Left Taillight cover(RED)	
8	PMZ50-M5-M-008	M3-50QT-013006	电瓶盒底板	Bottom Plate of Battery box	1
9	PMZ50-M5-M-009		夹片4.2mm	Clamp, 4.2mm	10
10	PMZ50-M5-M-010	GB/T845-ST4.8×16	自攻螺钉ST4.8×16	Screw, Tapping ST4.8×16	6
11	PMZ50-M5-M-011	M3-50QT-013007	电瓶压板A	Block A of Battery Box	1
12	PMZ50-M5-M-012	M3-50QT-013008	电瓶压板B	Block B of Battery Box	1
13	PMZ50-M5-M-013	GB/T5789-M6×12	六角法兰面螺栓M6×12	Flange Bolt M6×12	2
14	PMZ50-M5-M-014	GB/T845-ST4.2×12	自攻螺钉ST4.2×12	Screw, Tapping ST4.2×12	2



1	PMZ50-M5-N-001	M3-50QT-014001	后挡泥板(8817)	Rear Fender	1
2	PMZ50-M5-N-002	M3-50QT-014002	后尾泥板支架	Rear Mudguard Fender holder	1
3	PMZ50-M5-N-003	M3-50QT-014003	后挡泥板下罩(8818)	Rear Fender bottom cover	1
4	PMZ50-M5-N-004	GB/T5789-M8×16	六角法兰面螺栓M8×16	Flange Bolt, M8×16	4
5	PMZ50-M5-N-005	GB/T845-ST4.8×12	自攻螺钉ST4.8×12	Screw, Tapping ST4.2×16	1
6	PMZ50-M5-N-006	M3-50QT-014004	后转向灯	Rear Turning Light	2
7	PMZ50-M5-N-007	M3-50QT-014005	后牌照灯	Rear Registry Light	1
8	PMZ50-M5-N-008	M3-50QT-014006	后挡泥板胶垫	Rubber Mate of Rear Fender	1
9	PMZ50-M5-N-009	M3-50QT-014007	后反射器	Rear Reflector	1

10	PMZ50-M5-N-010	GB6177 M5	六角法兰面螺母M5	Flange Nut M5	3
11	PMZ50-M5-N-011	M3-50QT-014008	侧反射器支架	Side Reflector holder	1
12	PMZ50-M5-N-012	M3-50QT-014009	侧反射器	Side Reflector	2
13	PMZ50-M5-N-013	GB/T5789-M6×16	六角法兰面螺栓M6×16	Flange Bolt M6×16	2
14	PMZ50-M5-N-014	GB6177 M6	六角法兰面螺母M6	Flange NUT M6×16	2
15	PMZ50-M5-N-015	M3-50QT-014010	后轮挡泥板	Rear Mudguard, Rear Wheel	1
16	PMZ50-M5-N-016	M3-50QT-014011	后轮挡泥板左支架	Rear Mudguard Fender Left holder	1
17	PMZ50-M5-N-017	GB/T5789-M6×12	六角法兰面螺栓M6×12	Flange Bolt, M6×12	1
1	PMZ50-M5-O-001	M3-50QT-015001	后减震器支架(右)	REAR SHOCK ABSORBER Holder (Right)	1
2	PMZ50-M5-O-002	M3-50QT-015002	后减震器	Rear Shock Absorber Assy	1
3	PMZ50-M5-O-003	M3-50QT-015003	后减震器支架(左)	Rear Shock Absorber Holder (Left)	1
4	PMZ50-M5-O-004	M3-50QT-015004	动力连接板	Engine Hanger	1
	PMZ50-M5-O-005	轴承6203-2RS	轴承6203-2RS	Bearing 6203-2RS	2
	PMZ50-M5-O-006	M3-50QT-015005	衬套φ 25*φ 17*16	Collar φ 25*φ 17*16	1
	PMZ50-M5-O-007	M3-50QT-015006	衬套φ 25*φ 17*27	Collar φ 25*φ 17*16	1
	PMZ50-M5-O-008	M3-50QT-015007	缓冲套φ 8*φ 19*19	Cushion Collar φ 8*φ 19*19	1
5	PMZ50-M5-O-009	GB/T5789-M10×55	六角法兰面螺栓 M10×55	Hex Flange Bolt M10×55	1
6	PMZ50-M5-O-010	GB/T5789-M10×45	六角法兰面螺栓 M10×45	Hex Flange Bolt M10×45	1
7	PMZ50-M5-O-011	GB/T5789-M8×30	六角法兰面螺栓M8×30	Hex Flange Bolt M8×30	1


8	PMZ50-M5-O-012	GB/T5789-M10×110	六角法兰面螺栓 M10×110	Hex Flange Bolt M10×110	1
9	PMZ50-M5-O-013	GB/T5789-M8×30	六角法兰面螺栓M8 ×30	Hex Flange Bolt M8×30	1
10	PMZ50-M5-O-014	GB/T5789-M10×45	六角法兰面螺栓 M10×45	Hex Flange Bolt M10×45	4
11	PMZ50-M5-O-015	GB6187 M10×1.25	自锁螺母M10	Lock Nut M10	2
12	PMZ50-M5-O-016	GB/T5789-M10×55	六角法兰面螺栓 M10×55	Hex Flange Bolt M10×55	1

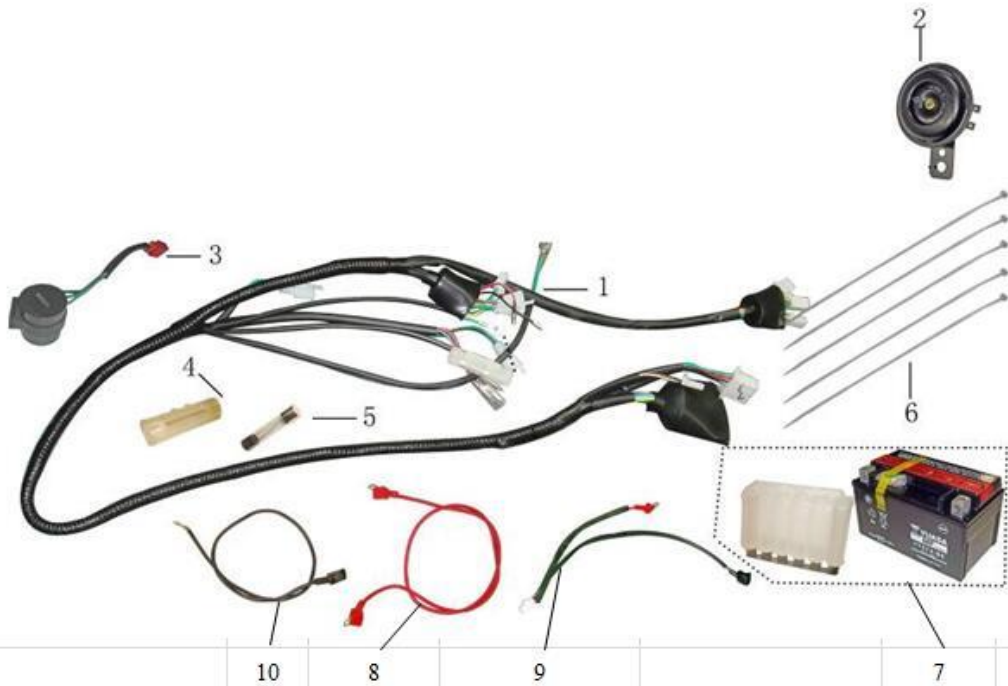 


1	PMZ50-M5-P-001	M3-50QT-016001	主电缆	Wire Harness	1
2	PMZ50-M5-P-002	M3-50QT-016002	喇叭	Horn	1
3	PMZ50-M5-P-003	M3-50QT-016003	闪光器	Winker Relay	1
4	PMZ50-M5-P-004	M3-50QT-016004	保险盒	Fuse Box	1
5	PMZ50-M5-P-005	M3-50QT-016005	保险丝 (15A)	Fuse 15A	2
6	PMZ50-M5-P-006	M3-50QT-016006	扎带	Strip Set	8
7	PMZ50-M5-P-007	M3-50QT-016007	蓄电池组件12V5AH	Battery Assy 12V5AH	1
8	PMZ50-M5-P-008	M3-50QT-016008	正极线	Cable, Positive Pole	1
9	PMZ50-M5-P-009	M3-50QT-016009	正负极线组合	Cable Assy	1
10	PMZ50-M5-P-010	M3-50QT-016010	搭铁线	Cable, Grounding	1



1	PMZ50-M5-Q-001	M3-50QT-017001	前右转向灯支架 (8807 R)	F. Right Turing light Bracket	1
2	PMZ50-M5-Q-002	M3-50QT-017002	大灯罩	Headlight Cover	1
3	PMZ50-M5-Q-003	M3-50QT-017003	大灯支架	Headlight Bracket	1
4	PMZ50-M5-Q-004	GB6177 M6	六角法兰面螺母M6	Hex Flange Nut M6	3
5	PMZ50-M5-Q-005	GB96 6	平垫φ 6	Washer φ 6	3
6	PMZ50-M5-Q-006	M3-50QT-017004	仪表缓冲胶垫	Speedometer Rubber Cushion	3
7	PMZ50-M5-Q-007	M3-50QT-017005	仪表	Speedometer	1
8	PMZ50-M5-Q-008	M3-50QT-017006	前大灯总成	Headlight Assy	1
9	PMZ50-M5-Q-009	M3-50QT-017007	大灯胶垫	Headlight Rubber Cushion	2
10	PMZ50-M5-Q-010	M3-50QT-017008	前左转向灯支架 (8807 L)	Front Left Turning light Bracket	1
11	PMZ50-M5-Q-011	GB/T5789-M6x30	六角法兰面螺栓 M6X30	Hex Flange Bolt M6X30	4
12	PMZ50-M5-Q-012	M3-50QT-017009	大灯支架胶垫	Headlight Bracket's Rubber Cushion	4
13	PMZ50-M5-Q-013	M3-50QT-017010	前转向灯	Front Turning Light	2

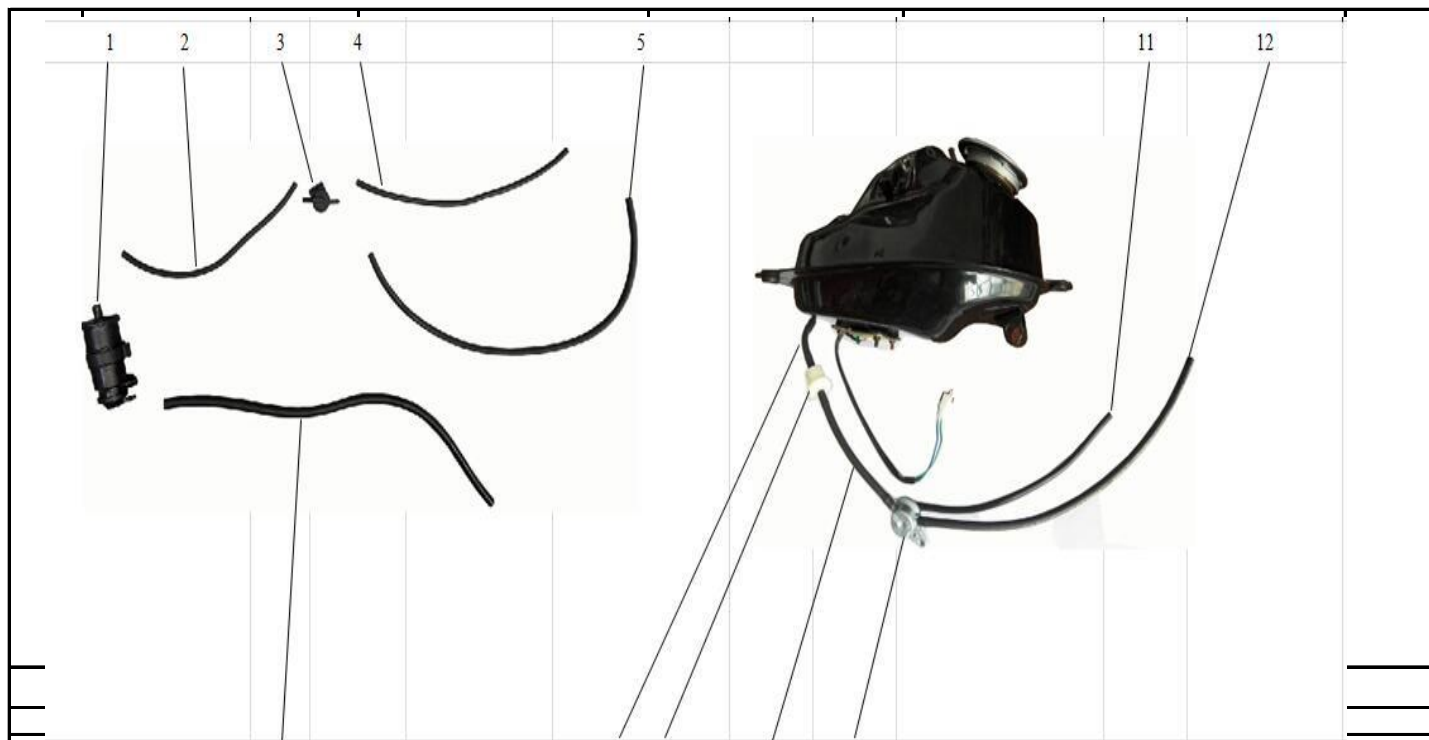 


1	PMZ50-M5-R-001	M3-50QT-018001	碳罐	Catalyzer	1
2	PMZ50-M5-R-002	M3-50QT-018002	截止阀连接管	Fuel Shut-off Valve Tube	1
3	PMZ50-M5-R-003	M3-50QT-018003	截止阀	Fuel Shut-off Valve	1
4	PMZ50-M5-R-004	M3-50QT-018004	油箱通气管	Fuel Tank Air Tube	1
5	PMZ50-M5-R-005	M3-50QT-018005	碳罐负压管	Catalyzer Air Tube	1
6	PMZ50-M5-R-006	M3-50QT-018006	碳罐连接管	Catalyzer Tube	1
7	PMZ50-M5-R-007	M3-50QT-018007	油箱出油管	Catalyzer oil tube	1
8	PMZ50-M5-R-008	M3-50QT-018008	燃油过滤器	Fuel Filter	1
9	PMZ50-M5-R-009	M3-50QT-018009	燃油过滤器连接管	Fuel filter Tube	1
10	PMZ50-M5-R-010	M3-50QT-018010	油开关	Feul Valve	1
11	PMZ50-M5-R-011	M3-50QT-018011	负压管	Negative Pressure Tube	1
12	PMZ50-M5-R-012	M3-50QT-018012	化油器进油管	Carburetor Tube	1

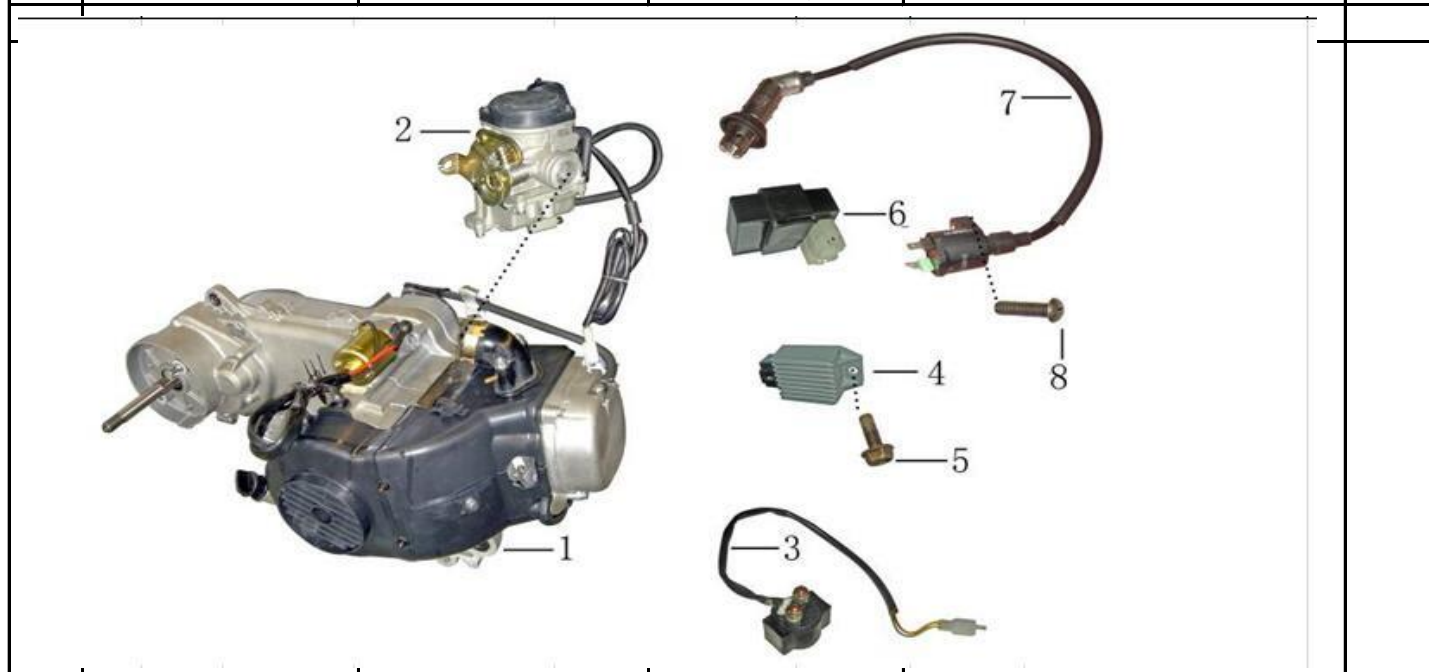 

1	PMZ50-M5-S-001	M3-50QT-019001	发动机总成	Engine Assy	1
2	PMZ50-M5-S-002	M3-50QT-019002	化油器	Carburetor Assy	1
3	PMZ50-M5-S-003	M3-50QT-019003	启动继电器	Starter Relay	1
4	PMZ50-M5-S-004	M3-50QT-019004	稳压器(交流八极)	Rectifier (AC-8)	1
5	PMZ50-M5-S-005	GB/T5789-M6×16	六角法兰面螺栓M6×16	Bolt, M6×16	1
6	PMZ50-M5-S-006	M3-50QT-019005	CDI	CDI	1
7	PMZ50-M5-S-007	M3-50QT-019006	高压包总成(屏蔽型)	Ignition Coil Assy	1
8	PMZ50-M5-S-008	GB/T818-M6×20	十字盘头螺钉 GB/T818-M6×20	Screw, M6×20	1



1	PMZ50-M5-T-001	YYPT00026001	随车工具	Tools Assy	1
---	----------------	--------------	------	------------	---

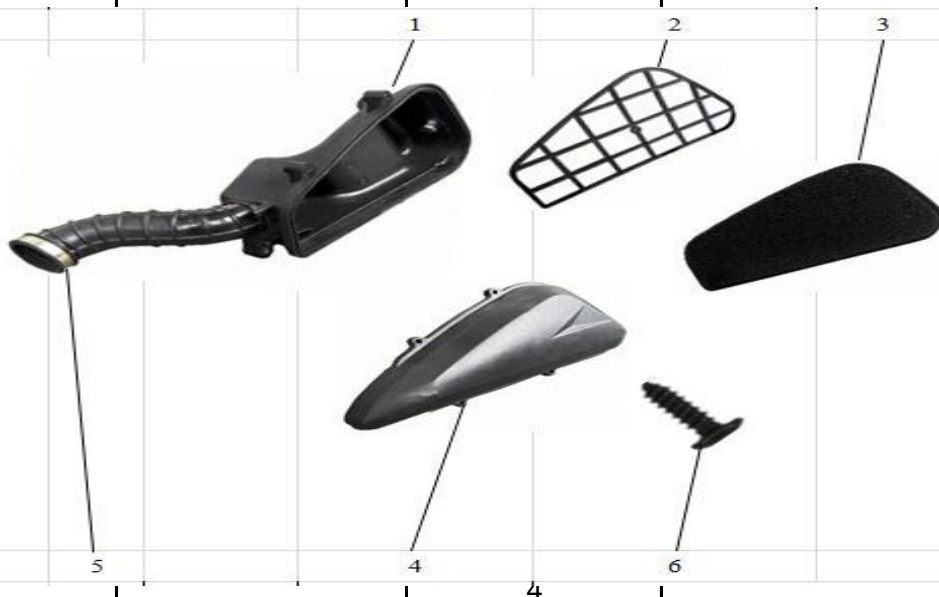 

1	PMZ50-M5-U-001	M3-50QT-021001	空滤器体(短七字,含进气管、卡箍)	Body, Air Cleaner	1
2	PMZ50-M5-U-002	M3-50QT-021002	滤芯支撑架		1
3	PMZ50-M5-U-003	M3-50QT-021003	滤芯(海绵)	Filter Core (Sponge)	1
4	PMZ50-M5-U-004	M3-50QT-021004	空滤器盖	Cover, Air Cleaner	1
5	PMZ50-M5-U-005	M3-50QT-021005	卡箍φ(32-40mm)	Fixing Ring φ(32-40mm)	1
6	PMZ50-M5-U-006	GB/T845-ST4.8×12	自攻螺钉ST4.8×12	Screw, Tapping ST4.8×12	6