



PMZ50-M3  
M5 50两轮

NO.	Part NO.	Description	Chinese Name	QTY
				
1	PMZ50-M5-A-001	Muffler	消音器筒子	1
2	PMZ50-M5-A-002	Pipe	消音器弯管	1
3	PMZ50-M5-A-003	Rear brake line	后制动线	1
4	PMZ50-M5-A-004	Rear Shock Absorber Assy	后减震	1
5	PMZ50-M5-A-005	Seat Cable	座垫锁拉索	1
6	PMZ50-M5-A-006	Gasket on muffler	消音器垫片	1
7	PMZ50-M5-A-007	Clamp buffer skin	卡箍缓冲皮	2
8	PMZ50-M5-A-008	Muffler clamp	消音器卡箍	2
				
1	PMZ50-M5-B-001		车架	1

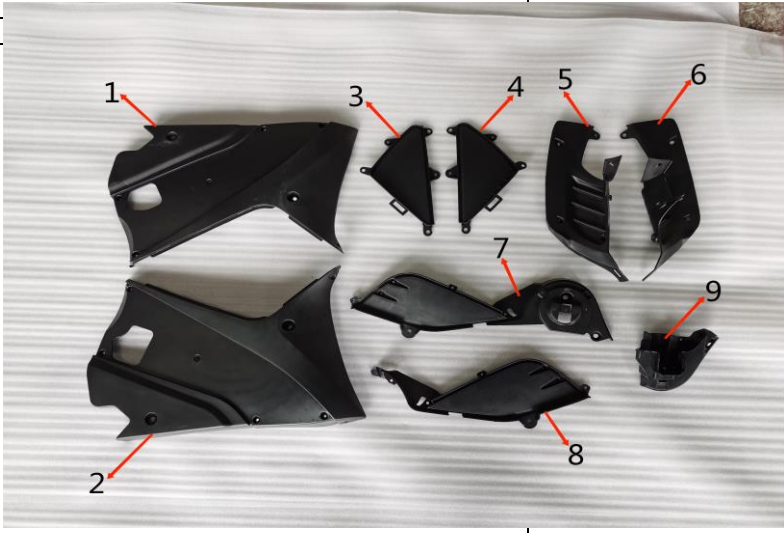
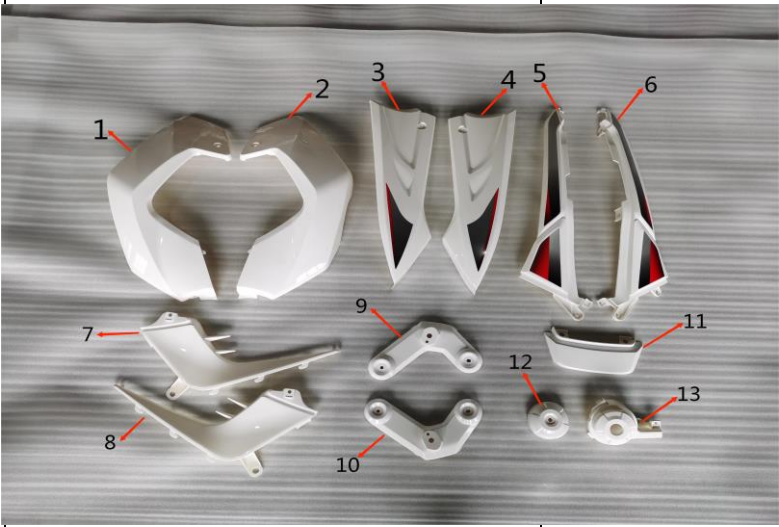
			Frame	
				
1	PMZ50-M5-C-001	Handbar	方向把	1
2	PMZ50-M5-C-002	Rear fender bracket	后挡泥板支架	1
3	PMZ50-M5-C-003	Headlight Bracket	大灯支架	1
4	PMZ50-M5-C-004	Rear Shock Absorber bracket (L)	后减震器支架(左)	1
5	PMZ50-M5-C-005	Rear Shock Absorber bracket (R)	后减震器支架(右)	1
6	PMZ50-M5-C-006	Engine Mount	动力吊架	1
7	PMZ50-M5-C-007	Rear Brake Lever	后刹手柄	1
8	PMZ50-M5-C-008	Kick Stand	单撑	1
9	PMZ50-M5-C-009	Electric lock bracket	电锁支架	1
10	PMZ50-M5-C-010	Kick Stand spring	单撑弹簧	1
11	PMZ50-M5-C-011	Tachometer cable clip	计速器线夹	1
12	PMZ50-M5-C-012	Disc brake cable clip	碟刹线夹	1
				
1	PMZ50-M5-D-001	Fuel Tank	油箱	1
2	PMZ50-M5-D-002	Fuel-level Sensor	油位传感器	1
3	PMZ50-M5-D-003	Fuel-level Sensor sealing ring	油位传感器密封圈	1
4	PMZ50-M5-D-004	Rear brake cable cover	后刹车线护套	1
5	PMZ50-M5-D-005	Rubber cushion under fuel tank	油箱下胶垫	2
6	PMZ50-M5-D-006	Headlight Rubber Cushion	大灯胶垫	2
7	PMZ50-M5-D-007	Speedometer Rubber Cushion	仪表缓冲胶垫	3
8	PMZ50-M5-D-008	Rubber cushion behind fuel tank	油箱后胶垫	2
9	PMZ50-M5-D-009	Rubber cushion front fuel tank	油箱前胶垫	1
10	PMZ50-M5-D-010	Rubber cushion inner bushing of Taillight	尾灯胶垫内衬套	2
11	PMZ50-M5-D-011	Rubber cushion of Taillight	尾灯胶垫	2
12	PMZ50-M5-D-012	Rubber cushion bushing under fuel tank	油箱下胶垫衬套	2
13	PMZ50-M5-D-013	Headlight bracket rubber cushion	大灯支架胶垫	4

1	PMZ50-M5-E-001	L.Foot rest Assy	左脚蹬	1
2	PMZ50-M5-E-002	R.Foot rest Assy	右脚蹬	1
3	PMZ50-M5-E-003	Front Shock Absorber	前减	2
4	PMZ50-M5-E-004	Front brake	前碟刹	1
5	PMZ50-M5-E-005	Steering stem	下联板	1
6	PMZ50-M5-E-006	Steel bowl	钢碗	9
7	PMZ50-M5-E-007			
8	PMZ50-M5-E-008	Tachometer	计速器	1
9	PMZ50-M5-E-009	Front axle	前轮轴	1
10	PMZ50-M5-E-010	front axle bushing	前轮衬套	1
1	PMZ50-M5-F-001	Front tire 120/70-12	前轮胎 120/70-12	1
2	PMZ50-M5-F-002	Rear tire 130/70-12	后轮胎130/70-12	1
3	PMZ50-M5-F-003	Rear Hub	后轮毂	1
4	PMZ50-M5-F-004	Front Hub	前轮毂	1
5	PMZ50-M5-F-005	Front brake disc	前碟刹盘	1
6	PMZ50-M5-F-006	Front brake disc screw bolt	前碟刹盘螺栓	4
7	PMZ50-M5-F-007	Tubeless valve	气门嘴	2

				
1	PMZ50-M5-G-001	Engine	发动机	1
2	PMZ50-M5-G-002	Engine Hanger	动力连接板	1
3	PMZ50-M5-G-003	Air Filter	空滤	2
4	PMZ50-M5-G-004	Carburetor	化油器	1
5	PMZ50-M5-G-005	Throttle cable	油门线	4
6	PMZ50-M5-G-006	Bushing	衬套	2
7	PMZ50-M5-G-007	Air filter clamp	空滤卡箍	1
8	PMZ50-M5-G-008	Outer bushing	外衬套	1
9	PMZ50-M5-G-009	Inner bushing	内衬套	1
10	PMZ50-M5-G-010	Nut	螺母	1
				
1	PMZ50-M5-H-001	Headlight	前大灯	1
2	PMZ50-M5-H-002	Rear light	后尾灯	1
3	PMZ50-M5-H-003	Speedometer	仪表	1
4	PMZ50-M5-H-004	Left hand grip	左把手套	1
5	PMZ50-M5-H-005	Throttle grip	油门把手胶套	1
6	PMZ50-M5-H-006	Left control panel	左开关	1
7	PMZ50-M5-H-007	Right control panel	右开关	1
8	PMZ50-M5-H-008	Rear left turning light	后左转向灯	1
9	PMZ50-M5-H-009	Rear right turning light	后右转向灯	1
10	PMZ50-M5-H-010	Rear Reflector	后反射器	1
11	PMZ50-M5-H-011	Rear license plate light	后牌照灯	1
12	PMZ50-M5-H-012	Front left turning light	前右转向灯	1
13	PMZ50-M5-H-013	Front right turning light	前左转向灯	1

				
1	PMZ50-M5-I-001	Main wire	主电缆	1
2	PMZ50-M5-I-002	Ignition coil	高压泵	1
3	PMZ50-M5-I-003	Starter relay	启动继电器	1
4	PMZ50-M5-I-004	Relay assy,tunsignal	闪光器	1
5	PMZ50-M5-I-005	CDI	CDI	1
6	PMZ50-M5-I-006	Regulator	稳压器	1
7	PMZ50-M5-I-007	Horn	喇叭	1
8	PMZ50-M5-I-008	Seat cushion lock	座椅锁门	1
9	PMZ50-M5-I-009	Ignition switch lock	点火开关锁	1
10	PMZ50-M5-I-010	Seat lock	座垫锁	1
11	PMZ50-M5-I-011	Seat Cushion Lock Cable Bracket	座垫锁拉线支架	1
12	PMZ50-M5-I-012	Fuel Tank Cap	油箱盖	1
13	PMZ50-M5-I-013	Seat Cushion Lock Buckle	座垫锁卡扣	1
14	PMZ50-M5-I-014	Key	钥匙	1
				
1	PMZ50-M5-J-001	Seat	座垫	1
2	PMZ50-M5-J-002	Left rear mirror	左后视镜	1
3	PMZ50-M5-J-003	Right rear mirror	右后视镜	1
4	PMZ50-M5-J-004	Handle bar block	方向把压块	2
5	PMZ50-M5-J-005	HANDLEBAR HOLDER	把手座	2
6	PMZ50-M5-J-006	Rubber cussion of handle bar block	方向把压块胶垫	4
7	PMZ50-M5-J-007			

				
1	PMZ50-M5-K-001	Left Decorating plate of Right side	侧盖左装饰条	1
2	PMZ50-M5-K-002	Right Decorating plate of Right side	侧盖右装饰条	1
3	PMZ50-M5-K-003	Front part of front fender	前泥板前部	1
4	PMZ50-M5-K-004	Battery box	电瓶盒	1
5	PMZ50-M5-K-005	Small Rear Fender	小后泥板	1
6	PMZ50-M5-K-006	Rear part of front fender	前泥板后部	1
7	PMZ50-M5-K-007	Speedometer cover	仪表挡风罩	1
8	PMZ50-M5-K-008	Decorating Panel of front Shock Absorber (L)	前减装饰盖（左）	1
9	PMZ50-M5-K-009	Decorating Panel of front Shock Absorber (R)	前减装饰盖（右）	1
				
1	PMZ50-M5-L-001	Front fender	前挡泥板	1
2	PMZ50-M5-L-002	Fuel tank cap outer cover	油箱盖外罩	1
3	PMZ50-M5-L-003	Rear fender	后挡泥板	1
4	PMZ50-M5-L-004	Rear Fender bottom cover	后挡泥板下罩	1
5	PMZ50-M5-L-005	Headlight Cover	大灯罩	1
6	PMZ50-M5-L-006	Fuel tank cap inner cover	油箱盖内罩	1

				
1	PMZ50-M5-M-001	Cover of Battery Box (L)	电瓶盒罩 (左)	1
2	PMZ50-M5-M-002	Cover of Battery Box (R)	电瓶盒罩 (右)	1
3	PMZ50-M5-M-003	Decorating Panel of Left cover	左侧盖装饰板	1
4	PMZ50-M5-M-004	Decorating Panel of Right cover	右侧盖装饰板	1
5	PMZ50-M5-M-005	Left side cover front connect plate	左侧盖前连接条	1
6	PMZ50-M5-M-006	Right side cover front connect plate	右侧盖前连接条	1
7	PMZ50-M5-M-007	Right side cover bottom connect plate	右侧盖下连接条	1
8	PMZ50-M5-M-008	Left side cover bottom connect plate	左侧盖下连接条	1
9	PMZ50-M5-M-009	Seat Lock's Box	座垫锁盒	1
				
1	PMZ50-M5-N-001	Side Cover( L )	侧盖 (左)	1
2	PMZ50-M5-N-002	Side Cover( R )	侧盖 (右)	1
3	PMZ50-M5-N-003	Decorating Panel of Battery Box(L)	电瓶盒装饰盖 (左)	1
4	PMZ50-M5-N-004	Decorating Panel of Battery Box(R )	电瓶盒装饰盖 (右)	1
5	PMZ50-M5-N-005	Left Taillight cover	左尾罩	1
6	PMZ50-M5-N-006	Right Taillight cover	右尾罩	1
7	PMZ50-M5-N-007	Left connect plate on Battery box	电池盒上左连接条	1
8	PMZ50-M5-N-008	Right connect plate on Battery box	电池盒上右连接条	1
9	PMZ50-M5-N-009	F. Right Turning light Bracket	前右转向灯支架	1
10	PMZ50-M5-N-010	F. Left Turning light Bracket	前左转向灯支架	1
11	PMZ50-M5-N-011	Taillight cover	尾罩	1
12	PMZ50-M5-N-012	Seat Lock's cover ( R )	座垫锁盖 (右)	1
13	PMZ50-M5-N-013	Seat Lock's cover (L)	座垫锁盖 (左)	1