



# PST150-19N

Figure A: frame(图A: 车架)

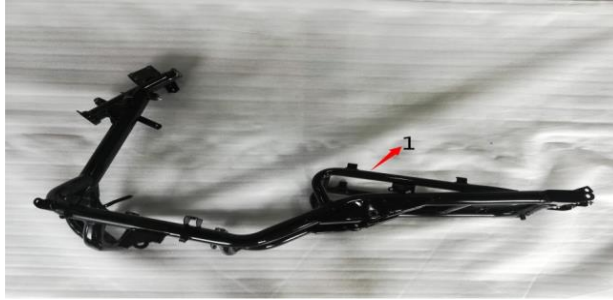


序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-A-1	Frame	车架	1

Figure B: muffler,etc(图B: 消音器等)

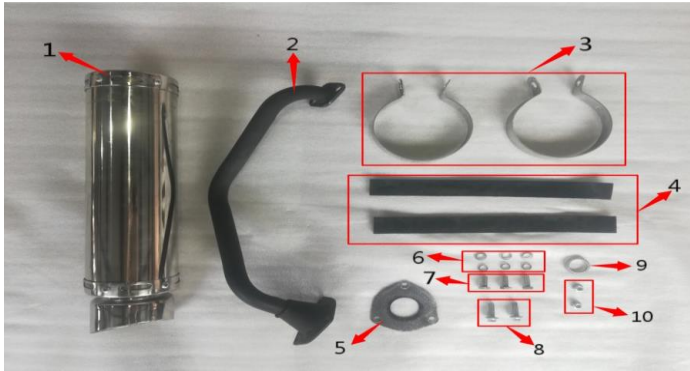


序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-B-1	Muffler	消音器筒子	1
2	PST150-19N-B-2	Exhaust	消音器弯管	1
3	PST150-19N-B-3	Clamp	消音器卡箍	2
4	PST150-19N-B-4	Rubber pad	消音器缓冲皮	2
5	PST150-19N-B-5	Muffler washer	消音器垫圈	1
6	PST150-19N-B-6	Spring washer	M8弹簧垫	6
7	PST150-19N-B-7	Bolt	六角8*20螺栓	3
8	PST150-19N-B-8	Bolt	8*25螺栓	2
9	PST150-19N-B-9	Muffler washer	消音器垫圈	1
10	PST150-19N-B-10	Nut	M8螺母	2

Figure C:steering stem, front shock,etc(图C:下联板, 前减震等)

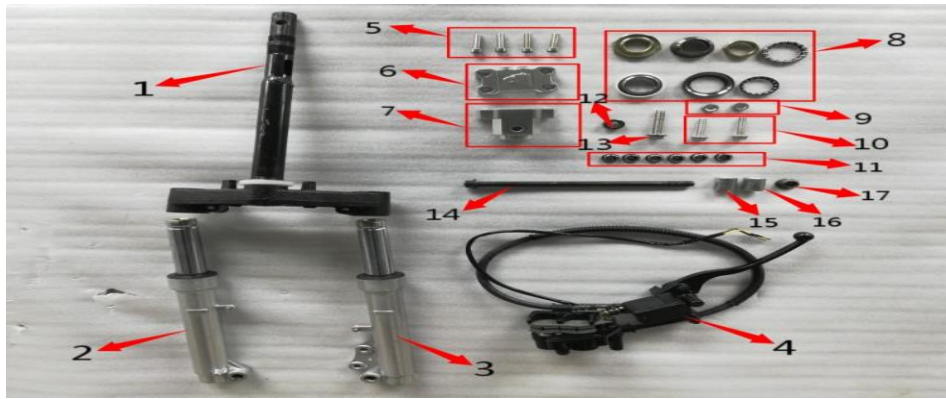


序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-C-1	Steering stem	下联板	1
2	PST150-19N-C-2	Front left shock	左前减震	1
3	PST150-19N-C-3	Front right shock	右前减震	1
4	PST150-19N-C-4	Front brake	前碟刹	1
5	PST150-19N-C-5	Bolt	内六角8*30螺栓	4
6	PST150-19N-C-6	Handle guide(up)	上把手座	1
7	PST150-19N-C-7	Handle guide (down)	下把手座	1
8	PST150-19N-C-8	Steel bowl	钢碗	1
9	PST150-19N-C-9	Bushing	16*8.5*6.5衬套	2
10	PST150-19N-C-10	Bolt	8*40前碟刹螺栓	2
11	PST150-19N-C-11	Ornamental buckle	装饰扣	6
12	PST150-19N-C-12	Bushing	腰型衬套	1
13	PST150-19N-C-13	Bolt	10*55螺栓	1
14	PST150-19N-C-14	Front wheel bearing	前轮轴	1
15	PST150-19N-C-15	Bushing	22*28*12.5前轮衬套	1
16	PST150-19N-C-16	Bushing	22*26*12.5前轮衬套	1
17	PST150-19N-C-17	Nut	M12螺母	1

Figure D:rear fender, etc(图D:后挡泥板等)

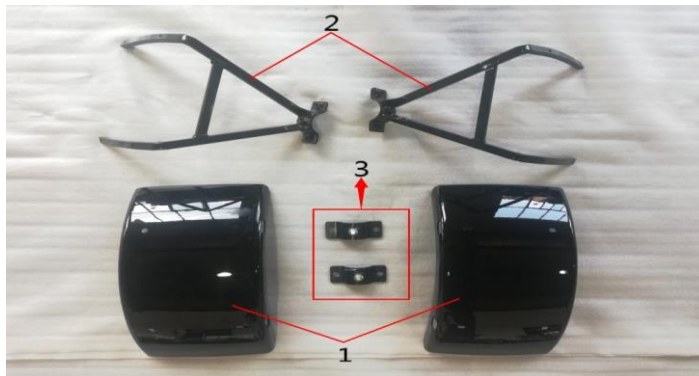


序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-D-1	Rear fender	后挡泥板	2
2	PST150-19N-D-2	Rear fender bracket	后挡泥板支架	2
3	PST150-19N-D-3	Rear fender bracket clip	后泥板支架抱箍	2

Figure E: handlebar, rear mirror, etc (图E: 把手, 左右后视镜等)

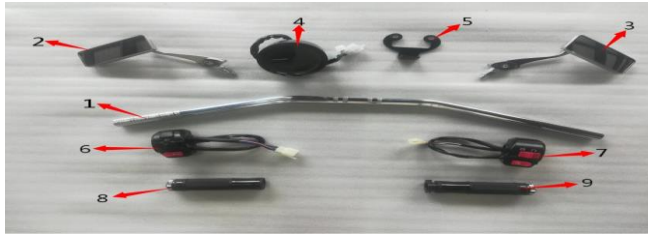

序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-E-1	Handlebar	把手	1
2	PST150-19N-E-2	Rear mirror LH	后视镜左	1
3	PST150-19N-E-3	Rear mirror RH	后视镜右	1
4	PST150-19N-E-4	Speedometer	仪表	1
5	PST150-19N-E-5	Speedometer bracket	仪表支架	1
6	PST150-19N-E-6	Left control panel	左开关	1
7	PST150-19N-E-7	Right control panel	右开关	1
8	PST150-19N-E-8	Hand grip (left)	左胶套	1
9	PST150-19N-E-9	Throttle grip	油门胶套	1

Figure F: rear brake, set square, etc (图F: 后碟刹, 三角板等)

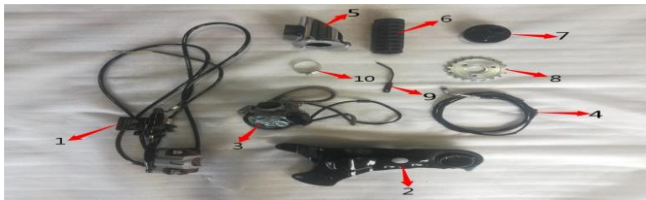

序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-F-1	Rear brake	后碟刹	1
2	PST150-19N-F-2	Connecting plate	三角板	1
3	PST150-19N-F-3	Carburetor	化油器	1
4	PST150-19N-F-4	Throttle cable	油门线	1
5	PST150-19N-F-5	Air filter	空滤器	1
6	PST150-19N-F-6	Rubber connecting	空滤橡胶接头	1
7	PST150-19N-F-7	Sprocket holder	链轮座	1
8	PST150-19N-F-8	Sprocket	530型19链轮	1
9	PST150-19N-F-9	Air filter bracket	空滤支架	1
10	PST150-19N-F-10	Clamp	卡箍	1

Figure G: headlight bracket, headlight cover, etc (图G: 大灯支架, 大灯网罩等)



序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-G-1	Headlight bracket	大灯支架	1
2	PST150-19N-G-2	Headlight cover	大灯网罩	1
3	PST150-19N-G-3	Battery holder	电池盒	1
4	PST150-19N-G-4	Front turning bracket	前转向灯支架	1
5	PST150-19N-G-5	Front shield install frame	面板支架	1
6	PST150-19N-G-6	Rear light bracket	尾灯支架	1
7	PST150-19N-G-7	Front fender bracket 1	前泥板支架1	1
8	PST150-19N-G-8	Front fender bracket 2	前泥板支架2	1
9	PST150-19N-G-9	Front fender bracket 3	前泥板支架3	1
10	PST150-19N-G-10	Speedo cable bracket	转速器支架	1

Figure H: differtinal, swing arm, etc's (图H: 差速器, 后平叉等)



序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-H-1	differtinal	差速器	1
2	PST150-19N-H-2	Swing arm	后平叉	1
3	PST150-19N-H-3	Left rear shock	左后减	1
4	PST150-19N-H-4	Right rear shock	右后减	1
5	PST150-19N-H-5	Chain	链条	1
6	PST150-19N-H-6	Chain cover	上链罩	1
7	PST150-19N-H-7	Bolt	六角10*40差速器螺栓	6
8	PST150-19N-H-8	Bolt	六角10*25差速器螺栓	2
9	PST150-19N-H-9	Chain adjustor	调链器	2
10	PST150-19N-H-10	Bolt	8*20后碟刹螺栓	2
11	PST150-19N-H-11	Bolt	10*40后减螺栓	2
12	PST150-19N-H-12	Bolt	10*55后平叉螺栓	2
13	PST150-19N-H-13	Bushing	30*35*10缓冲衬套	2
14	PST150-19N-H-14	Bushing	M10后平叉衬套	1


Figure I: latter guard shield, rear shield, etc's (图I: 前罩, 后罩等)



序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-I-1	Rear shield	后罩	1


2	PST150-19N-I-2	Latter guard shield	前罩	1
3	PST150-19N-I-3	Front fender	前泥板	1
4	PST150-19N-I-4	Headlight cover	大灯罩	1
5	PST150-19N-I-5	Edge reflector plate	边缘反射镜片	2

Figure J:main wire, ignition coil, etc's (图J: 导线总成, 高压泵等)

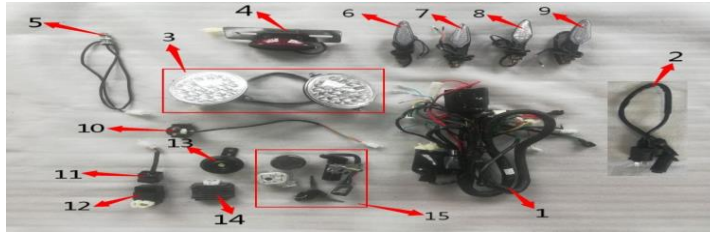

序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-J-1	Main wire	导线总成	1
2	PST150-19N-J-2	Ignition coil	高压泵	1
3	PST150-19N-J-3	Headlight	大灯	1
4	PST150-19N-J-4	Rear light	尾灯	1
5	PST150-19N-J-5	Fuel level sensors	传感器	1
6	PST150-19N-J-6	Front left turning	前左转向灯	1
7	PST150-19N-J-7	Front right turning	前右转向灯	1
8	PST150-19N-J-8	Rear left turning	后左转向灯	1
9	PST150-19N-J-9	Rear right turning	后右转向灯	1
10	PST150-19N-J-10	Starter relay	继电器	1
11	PST150-19N-J-11	Tunsignal relay assy	闪光器	1
12	PST150-19N-J-12	CDI	点火器	1
13	PST150-19N-J-13	Horn	喇叭	1
14	PST150-19N-J-14	Regulator	稳压器	1
15	PST150-19N-J-15	Key set	套锁	1

Figure K:rear tire, rear rim, etc's (图K: 后轮胎, 后轮钢圈等)

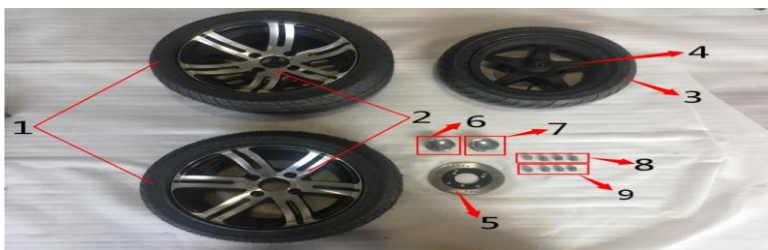

序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-K-1	Rear tire	后轮胎	2
2	PST150-19N-K-2	Rear rim	后轮钢圈	2
3	PST150-19N-K-3	Front tire	前轮胎	1
4	PST150-19N-K-4	Front rim	前轮钢圈	1
5	PST150-19N-K-5	Front brake disc	前刹车盘	1
6	PST150-19N-K-6	Rear cover	防尘装饰盖	1
7	PST150-19N-K-7	Rear cover	防尘装饰盖	1
8	PST150-19N-K-8	Tire nut	轮胎螺母	4

9	PST150-19N-K-9	Tire nut	轮胎螺母	4
---	----------------	----------	------	---

Figure L: seat, fuel tank, etc (图L: 坐垫、油箱等)



序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-L-1	Seat	坐垫	1
2	PST150-19N-L-2	Fuel tank	油箱	1
3	PST150-19N-L-3	Seat attachment 1	坐垫安装附件1	2
4	PST150-19N-L-4	Seat attachment 2	坐垫安装附件2	2
5	PST150-19N-L-5	Oil pump	油泵	1
6	PST150-19N-L-6	Front footpeg	前脚踏	2
7	PST150-19N-L-7	Gas sensor	油位传感器	1
8	PST150-19N-L-8	Oil seal	油封	1
9	PST150-19N-L-9	Fixed ring	固定圈	1
10	PST150-19N-L-10	Front footpeg pin	前脚踏销子	2
11	PST150-19N-L-11	Spring	弹簧	2
12	PST150-19N-L-12	Seat attachment 3	坐垫安装附件3	1
13	PST150-19N-L-13	Filter	过滤器	1

Figure M: fuel tank bracket, cover under seat, etc (图M: 脚踏支架, 坐垫下护板等)



序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-M-1	Fuel tank bracket	脚踏支架	1
2	PST150-19N-M-2	Cover under seat	坐垫下护板	1
3	PST150-19N-M-3	Fuel tank cover	油箱上护板	1
4	PST150-19N-M-4	Cover under fuel tank	油箱下护板	1

Figure N: engine, axle, nut (图N: 发动机、发动机轴、螺母)



序号Sr.No	件号	英文名称	中文名称	数量
	Part No.	English Description	Chinese Description	Quantity
1	PST150-19N-N-1	Engine	发动机	1
2	PST150-19N-N-2	Axle	发动机轴	1
3	PST150-19N-N-3	Nut	M10螺母	1













