

NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-A-001	发动机	ENGINE	1
2	PST50-19N-A-002	螺栓	BOLT (M8*35 FLANGE)	1
3	PST50-19N-A-003	螺母	NUT (M16 SELF LOCK)	1
7	PST50-19N-A-004	链轮座	SPROCKET HOLDER	1
8	PST50-19N-A-005	链轮	SPROCKET	1
9	PST50-19N-A-006	螺栓	BOLT (M8*20 SOCKETS)	3
10	PST50-19N-A-007	弹簧	SPRING (M8)	3
11	PST50-19N-A-008	锁片	CLIP	1
12	PST50-19N-A-009	链条	CHAIN	1



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-B-001	air filter bend	空滤弯管	1
2	PST50-19N-B-002	air filter	空滤器	1
3	PST50-19N-B-003	clamp	卡箍	2
4	PST50-19N-B-004	airfilter bracket	空滤固定支架1	1
5	PST50-19N-B-005	airfilter bracket	空滤固定支架2	1
6	PST50-19N-B-006	rubber connecting	空滤橡胶接头	1



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-C-001	消音器	MUFFLER	1
2	PST50-19N-C-002	盖形螺母	ACORN NUT	2
3	PST50-19N-C-003	石棉垫圈	WASHER	1
4	PST50-19N-C-004	螺栓	BOLT (M8*35 FLANGE)	1
5	PST50-19N-C-005	衬套	BUSHING	1
6	PST50-19N-C-006	衬套	BUSHING	1
7	PST50-19N-C-007	三角板	SET SQUARE	1
8	PST50-19N-C-008	支架	BRACKET	1
9	PST50-19N-C-009	螺母	NUT (M8 SELF LOCK)	1
10	PST50-19N-C-010	螺栓	BOLT (M8*20 FLANGE)	1
11	PST50-19N-C-011	螺栓	BOLT (M10*25 FLANGE)	1



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-D-001	tail light	大灯组件	1
2	PST50-19N-D-002	ornamental buckle	装饰扣	3
3	PST50-19N-D-003	rubber pad	橡胶垫圈	3



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-E-001	REAR TIRE	后轮胎	2
2	PST50-19N-E-002	REAR RIM	后轮钢圈	2
3	PST50-19N-E-003	REAR COVER	防尘装饰盖	2




NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-F-001	front tire	前轮胎	1
2	PST50-19N-F-002	front rim	前轮钢圈	1
3	PST50-19N-F-003	front brake disc	前刹车盘	1
4	PST50-19N-F-004	valve	气门嘴	1




NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
-----	-------------------	--------------	-------------	-----



1	PST50-19N-G-001	LATTER GUARD SHIELD	前罩	1
2	PST50-19N-G-002	rear shield	后罩	1

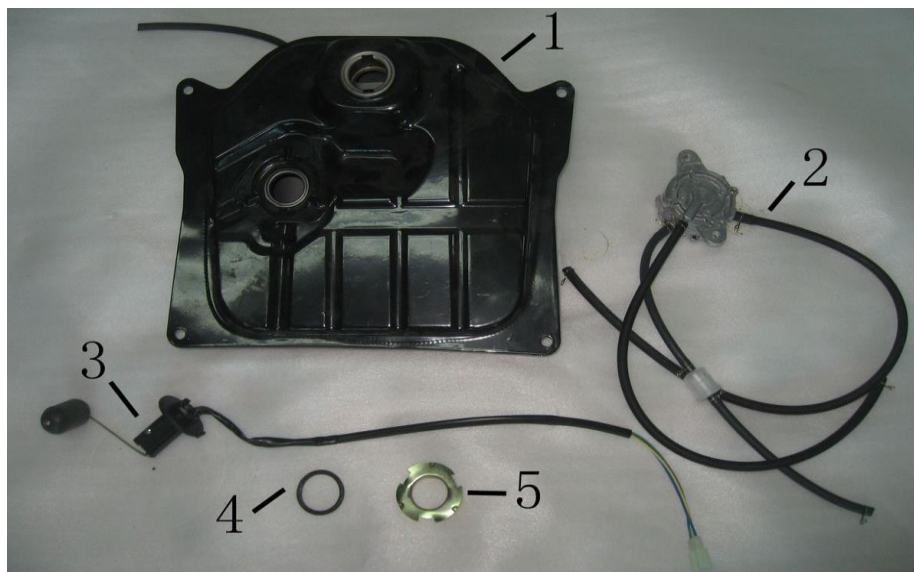


NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-H-001	fuel tank	油箱	1
2	PST50-19N-H-002	oil pump	油泵	1
3	PST50-19N-H-003	GAS SENSOR	油位传感器	1
4	PST50-19N-H-004	oil seal	油封	1
5	PST50-19N-H-005	fixed ring	固定圈	1

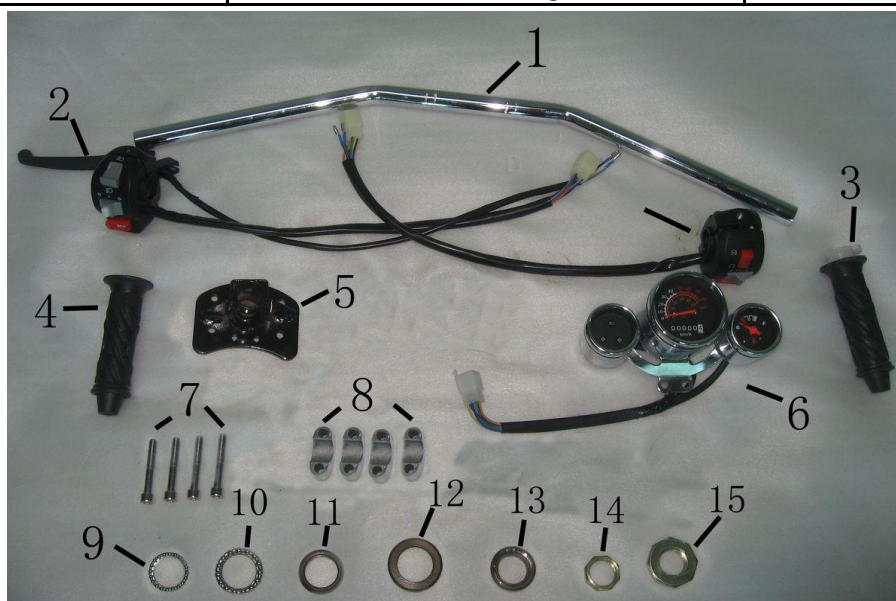

NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-I-001	handlebar	把手	1
2	PST50-19N-I-002	left and right CONTROL PANEL	左右开关	1
3	PST50-19N-I-003	THROTTLE GRIP	油门胶套	1
4	PST50-19N-I-004	lfet hand grip	左胶套	1
5	PST50-19N-I-005	handle guide	把手座	1
6	PST50-19N-I-006	speedometer	仪表	1
7	PST50-19N-I-007	bolt	压块螺栓	4

8	PST50-19N-I-008	handlebar lock	把手压块	4
9	PST50-19N-I-009	STEEL BALL	上钢珠	1
10	PST50-19N-I-010	STEEL BALL	下钢珠	1
11	PST50-19N-I-011	washer	垫圈	1
12	PST50-19N-I-012	RACE, INNER	下钢碗	1
13	PST50-19N-I-013	RACE, INNER	上钢碗	1
14	PST50-19N-I-014	nut	螺母1	1
15	PST50-19N-I-015	nut	螺母2	1

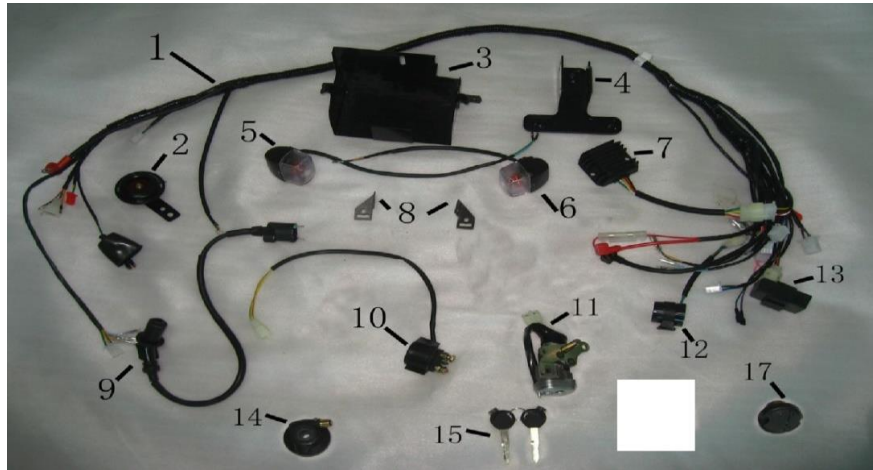

NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-J-001	MAIN WIRE	导线总成	1
2	PST50-19N-J-002	HORN	喇叭	1
3	PST50-19N-J-003	HOLDER, BATTERY	电池盒	1
4	PST50-19N-J-004	front shield install frame	前罩安装支架	1
5	PST50-19N-J-005	front turning lh	前左转向灯	1
6	PST50-19N-J-006	front turning rh	前右转向灯	1
7	PST50-19N-J-007	REGULATOR	稳压器	1
9	PST50-19N-J-008	IGNITION COIL	高压泵	1
10	PST50-19N-J-009	STARTER RELAY	启动继电器	1
11	PST50-19N-J-010	SWITCH ASSY, IGNITION	电锁	1
12	PST50-19N-J-011	RELAY ASSY, TUN SIGNAL	闪光器	1
13	PST50-19N-J-012	CDI	点火器	1
14	PST50-19N-J-013	speed sensor	速度计齿轮箱	1
15	PST50-19N-J-014	key	钥匙	1
17	PST50-19N-J-015	fuel tank cover	油箱盖	1



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
-----	-------------------	--------------	-------------	-----


1	PST50-19N-K-001	rear light	尾灯	1
---	-----------------	------------	----	---



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1		front brake	前刹	1
1-1	PST50-19N-L-001	Master cylinder	碟刹上泵	1
1-2	PST50-19N-L-002	brake lever	碟刹手柄	1
1-3	PST50-19N-L-003	Brake Line	碟刹油管	1
1-4	PST50-19N-L-004	Brake Caliper	碟刹下泵	1
1-5	PST50-19N-L-005	Brake Pad	摩擦片	2



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-M-001	CARBURETOR	化油器	1
2	PST50-19N-M-002	THROTTLE CABLE	油门线	1

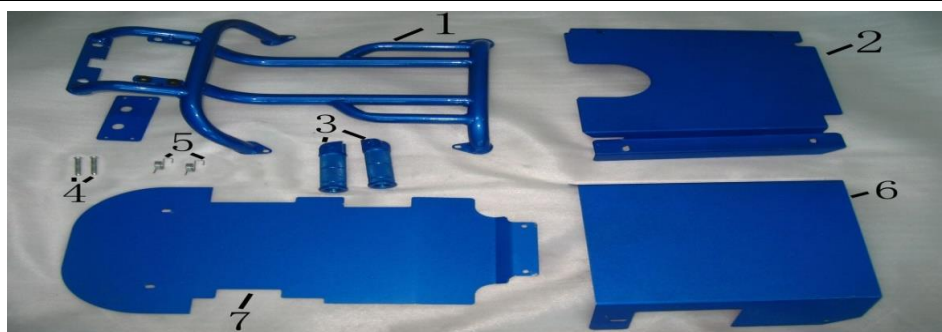




NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-N-001	FUEL TANK BRACKET	脚踏支架	1
2	PST50-19N-N-002	FUEL TANK COVER	油箱上护板	1
3	PST50-19N-N-003	front footpeg	前脚踏	2
4	PST50-19N-N-004	front footpeg pin	前脚踏销子	1
5	PST50-19N-N-005	SPRING	弹簧	1
6	PST50-19N-N-006	COVER UNDER FUEL TANK	油箱下护板	1
7	PST50-19N-N-007	cover under seat	坐垫下护板	1



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-0-001	SWING ARM	后平叉	1
2	PST50-19N-0-002	SEAT	坐垫	1
3	PST50-19N-0-003	MUFFLER	消声器	1
4	PST50-19N-0-004	differtinal	差速器	1
5	PST50-19N-0-005	REAR SHOCK	后减	2
6	PST50-19N-0-006	REAR TRUNING LIGHT	后转向灯	2
7	PST50-19N-0-007	REAR FENDER	挡泥板	2
8	PST50-19N-0-008	FENDER BRACKET, LEFT, REAR	左后挡泥板支架	1
9	PST50-19N-0-009	FENDER BRACKET, RIGHT, REAR	右后挡泥板支架	1

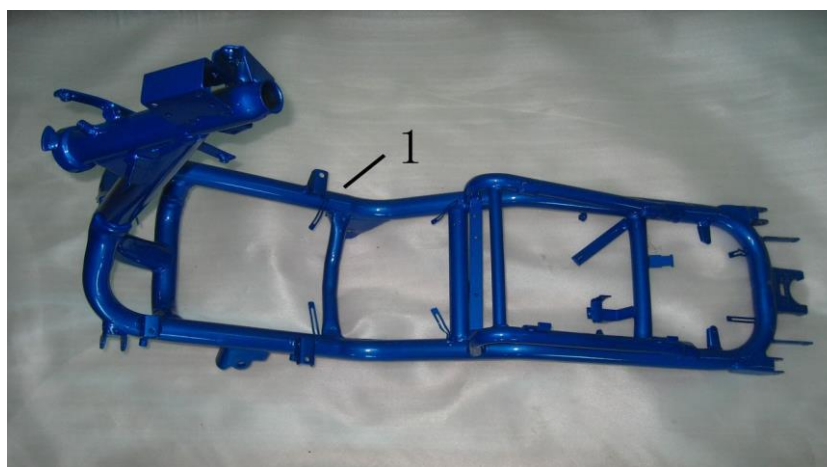

NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-P-001	frame	车架	1



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-Q-001	battery	蓄电池	1
2	PST50-19N-Q-002	rear mirror LH	后视镜左	1
3	PST50-19N-Q-003	rear mirror RH	后视镜右	1
4	PST50-19N-Q-004	electrolyte	电解液	1
5	PST50-19N-Q-005	climbing belt	攀带	1
6	PST50-19N-Q-006	tool	工具1	1
7	PST50-19N-Q-007	tool	工具2	1
8	PST50-19N-Q-008	tool	工具3	1
9	PST50-19N-Q-009	tool	工具4	1
10	PST50-19N-Q-010	steering stem cover	下联板罩	1



NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-R-001	rear brake cable	后刹线	1
2	PST50-19N-R-002	speedo cable	里程线	1
3	PST50-19N-R-003	kick stand spring	单撑弹簧	1
4	PST50-19N-R-004	kick stand	单撑	1





NO.	ICEBEAR PARTS NO.	Chinese name	Description	QTY
1	PST50-19N-S-001	steel bowel	钢碗	1
2	PST50-19N-S-002	BRACKET	支架	1
3	PST50-19N-S-003	steering stem	下联板	1
4	PST50-19N-S-004	front fender	前泥板	1
5	PST50-19N-S-005	front shock	减震	2