


PAD125-3(V1S125图表)

Figure A: the muffler components, oxygen sensor (图A: 消音器组件)

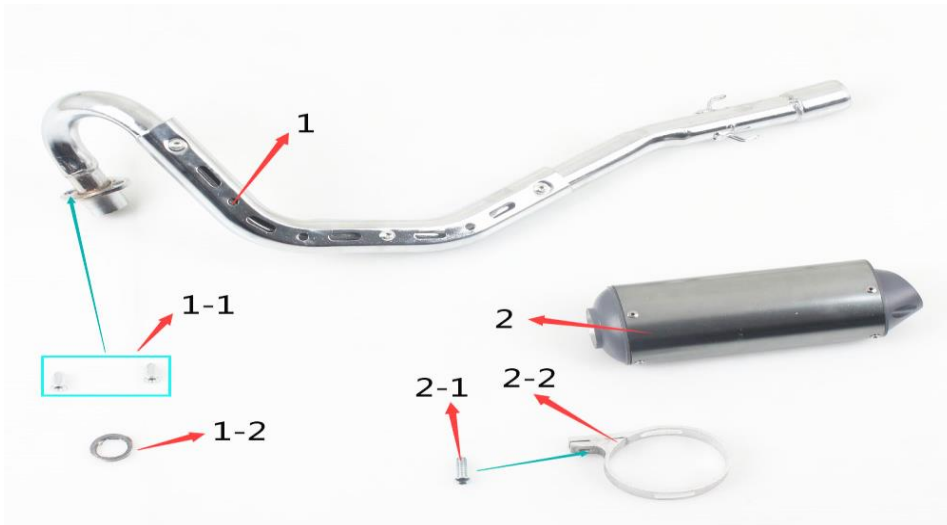

序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	11501-015	Exhaust pipe	排气管组件	1
1--1	80309-001	Muffler screws M6*21	六角盖型螺母M6X21	2
1--2	11503-001	Exhaust Seal	消音器密封垫	1
2	11502-010	Muffler	消音器组件	1
2--1	80316-011	Clamp bolt M8*25	内六角半圆头螺栓M8X25	1
2--2	11502-010-01	Exhaust Clamp	卡箍	1


Figure B:Steering handle assembly, etc (图B: 方向把操控类)



序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	50207-001	Clutch lever assy	离合把总成	1
1--1	50207-001-01	Clutch lever	离合小把	1
2	80808-003-03	Rubber harness strap	橡胶线束绑带	1
3	50206-001/002-03	Left&Right grips	左右把套	2
4	21203-002	Kill switch assy	V1S熄火开关HGZ	1
4--1	21203-002-01	Kill switch wire	熄火开关线	1
4--2	21203-002-02	Switch fixing	开关固定片	1
5	50214-005	Throttle cable	V1S油门线	1
6	50211-001	DT throttle	daytona油门座	1


7	50201-004-01	Handle bar steel	V1S钢制方向把	1
8	50218-007	Foam pad	圆形护套芯	1
9	70204-007	Hnadle pad cover	护套皮	1
10	50213-001	Clutch cable	V1S前置离合线	1
11	32100-007	Front brake assy	前大双碟刹总成	1
11--1	32100-007-01	Fold brake lever	折叠刹车把	1
11--2	32100-007-02	Front brake	前大双碟刹	1
11--3	32100-007-03	Front brake bracket	前刹支架	1
11--4	80320-011	Front brake bolts	外八用小头法兰三螺栓	2
11--5	32100-007-04	Brake pads	碟刹蹄块	2
11--6	32107-004-02	Front brake caliper	前大双碟刹下泵总成	1

Figure C: Front shock absorption and rear shock absorption components, etc（图C：后减组件等）

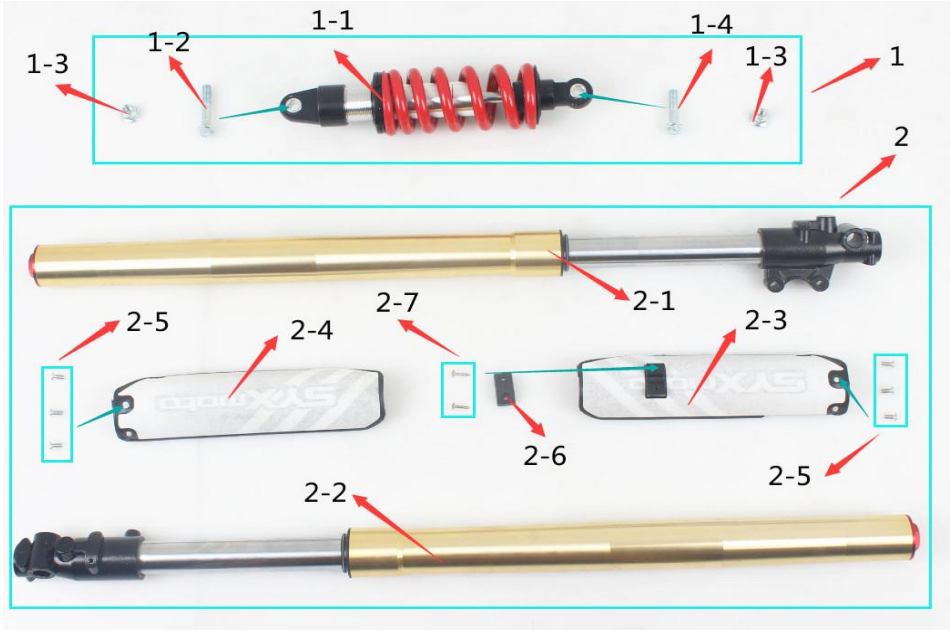


序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	40200-056-02	Rear shock assy	V1S后减震总成MY	1
1--1	40200-056-02-01	Rear shock	后减震器	1
1--2	80320-030	Rear shock bolt Up	外八用小头法兰三螺栓	1
1--3	80308-008	Rear shock nut	外八用小头法兰三螺栓螺母	2
1--4	80320-028	Rear shock bolt Bottom	外八用小头法兰三螺栓	1
2	V1S-Figure C-2	Front fork assy	前减震器总成	1
2--1	40100-037-02	Front fork Left	前左倒减SX/浅金筒	1
2--2	40100-038-02	Front fork Right	前右倒减SX/浅金筒	1
2--3	40100-037-02-01	Front fork Left guard	左前减护板	1
2--4	40100-038-02-01	Front fork Right guard	右前减护板	1
2--5	80310-005	Guard screw	十字小盘头螺钉M5X12	6
2--6	40100-037-02-01-01	Guard Fixed block	前减护板压块	1
2--7	80311-007	Fixed block screw	十字盘头自攻螺钉CT4-DV16	2

Figure D: rear fork components, brake components, etc.（图D：后又组件、导链组件等）

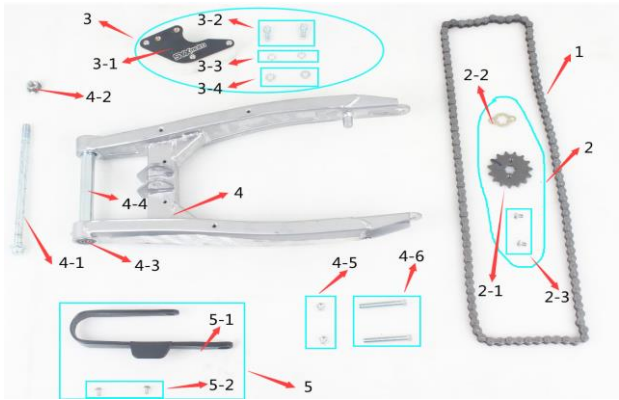

序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	30300-019	Chain assy	链条SF	1
2	V1S-Figure D-2	Sprocket assy	小链轮总成	1
2-1	10114-0481	Sprocket	小链轮	1
2-2	10114-0490	Sprocket locker	小链轮卡片	2
2-3	10114-0482	Sprocket bolt	外六角螺栓M6X10	1
3	30304-001-06	GD chain guard assy	广东款挡链器总成	1
3-1	30304-001-06-01	Chain guard	挡链器	1
3-2	80314-020	Chain guard bolt	内六角圆柱头螺栓M8X20	2
3-3	80301-003	Spring washer	弹垫φ8	2
3-4	80302-005	Flat gasket	平垫φ8	2
4	45300-007-01	Swingarm arm	V1钢一字平叉	1
4-1	80101-018	Swingarm axle	平叉轴M12X220x1.25	1
4-2	80308-009	Swingarm axle nut	法兰尼龙防松螺母M12	1
4-3	80701-005	Swingarm bearing	6001RS轴承	2
4-4	45304-001	Flat fork lined pipe	平叉内衬管	1
4-5	80305-006	Chain adjust nut	调链螺母	2
4-6	80319-010	Chain adjust bolt	调链螺栓	2
5	30304-009	Chain guide assy	导链套总成	1
5-1	30304-009-01	Chain guide	导链套	1
5-2	80316-005	Chain guide bolt	内六角半圆头螺栓M6X10	2

Figure E: engine, starting lever, shift lever, etc. (图E:发动机及其附件等)

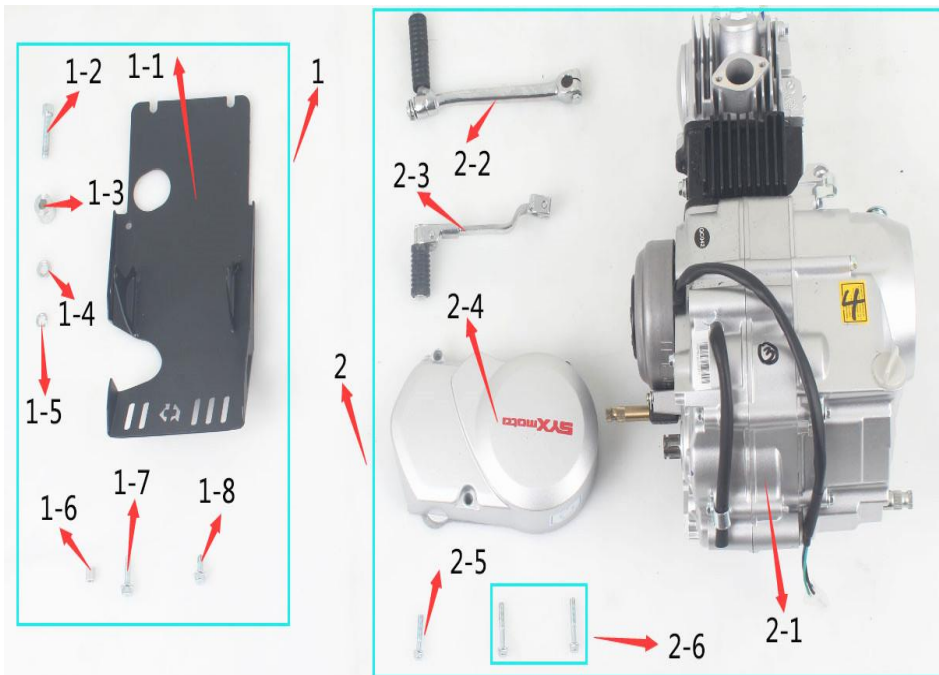


序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	V1S-Figure E-1	Engine tray assy	V1S发动机托盘总成	1
1-1	11801-002-01	Engine tray	V1S发动机托盘	1
1-2	80314-024	Tray bolt M8*40	内六角圆柱头螺栓M8X40	4
1-3	80201-034	Spacer φ8*φ20*L16	隔套φ8*φ20*L16	4
1-4	80301-003	Spring washer	弹垫φ8	4
1-5	80302-005	Flat gasket	平垫φ8	4
1-6	80201-005	Spacer φ6*φ10*L10	隔套φ6*φ10*L10	1
1-7	80320-004	Tray bolt M6*25	外六角小头螺栓M6X25	1
1-8	80320-002	Tray bolt M6*16	外六角小头螺栓M6X16	1
2	10100-040	YX125 Engine assy	银翔改125发动机总成	1
2-1	10100-040-01	YX Engine	发动机	1
2-2	30201-005	Forged starter shifter	锻造启动杆	1
2-3	30102-007	Gear shifter	变档杆	1
2-4	10114-0408	Engine side cover	发动机边盖	1
2-5	10114-0417	Engine side cover M6*28	外六角小头螺栓M6X28	1
2-6	10114-0418	Engine side cover M6*35	外六角小头螺栓M6X35	2

Figure F: the cushion, oil tank, tubing, etc. (图F: 油箱、空滤器、化油器等)




序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	11400-020-06	Sponge air filter assy	V1S海绵空滤器总成TY	1
1--1	11400-020-06-01	Sponge air filter	V1S海绵空滤器	1
1--2	V1S-Figure F-1-2	Sponge air filter clamp	卡箍	1
2	70501-004	CRF110 tank assy	CRF110油箱总成SC	1
2--1	70501-004	CRF110 tank	CRF110油箱	1
2--2	70505-002-07	Vent valve	双向铝制通气阀	1
2--3	V1S-Figure F-2-3	Tnak cap	油箱盖	1
2--4	80320-004	Tank bolts M6X25	外六角小头法兰三螺栓	2
2--5	80317-002	Seat limit bolt	内六角大盘头螺栓	1
2--6	70504-006	T sleeve	油箱T型套 $\phi 7*9*\phi 11+\phi 20*T2$	2
2--7	80302-007	Flat gasket $\phi 8*\phi 22*1.5$	大垫片 $\phi 8*\phi 22*1.5$	1
2--8	80320-009	Tank bolts M8X25	外六角小头法兰三螺栓	1
2--9	80201-020	Tank spacer	隔套 $\phi 8*\phi 11*L12$	1
3	11100-017	Carburetor assy	V1S化油器总成JK EPA	1
3--1	11100-017-01	Carburetor	V1S化油器	1
3--2	10114-0329	Carburetor heat insulation pad	隔热垫	1
3--3	10114-0328	Carburetor gasket	纸垫	1
3--4	10114-0330	Carburetor Flange bolt M6*30	外六角小头法兰三螺栓	2
3--5	80306-001	Carburetor Flange nut	六角法兰带齿螺母	2
4	V1S-Figure F-4	Intake pipe assy	进气管总成	1
4--1	10114-0330	Intake pipe bolt	外六角小头法兰三螺栓	2
4--2	10114-0326	Intake pipe gasket	进气管纸垫	1
4--3	10114-0327	Intake pipe	进气管	1
5	70504-005	CRF110 tank switch assy	CRF110油箱开关总成	1
5--1	70504-005-01	CRF110 tank switch	CRF110油箱开关	1
5--2	V1S-Figure F-5-2	O-ring	O型圈 $\phi 17*\phi 22*8$	2
5--3	80802-002	Fuel pipe	燃油管A	1
5--4	80602-008	Fuel pipe clip	燃油管卡扣	2
5--5	80320-002	Tank switch bolt	外六角小头法兰三螺栓	2

FigureG: oil tank, tubing, oil level sensor, etc. (图G:车架组件等)

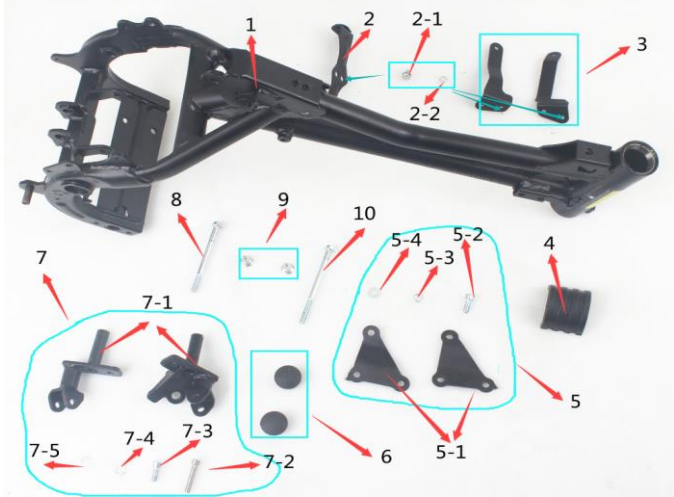


序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	45100-010-01	Double frame assy	V1 双梁车架总成	1
2	45500-003-01	CRF110 tank bracket	CRF110油箱支架	1
2--1	80320-001	Hexagon small head flange bolts M6X12	外六角小头法兰螺栓 M6X12	6
2--2	80301-002	Spring washer $\phi 6$	弹垫 $\phi 6$	4
3	45500-013-02	Left and right guard plate bracket	左右护板支架	2
4	70504-003	Fuel tank cushion block	油箱缓存垫块	1
5	45500-013-02	Engine hanger left/right assy	V1S发动机左右吊片总成	1
5--1	45500-013-02-01	Engine hanger left/right	V1S发动机左右吊片	1
5--2	80314-020	Hexagon socket head bolt M8X20	内六角圆柱头螺栓M8X20	4
5--3	80301-003	Spring washer $\phi 8*\phi 14*2.5$	弹垫 $\phi 8*\phi 14*2.5$	4
5--4	80302-005	Flat gasket $\phi 8*\phi 16*1.5$	平垫 $\phi 8*\phi 16*1.5$	4
6	80804-002	Swingarm plug	平叉堵头	2
7	V1S-FigureG-7	Footpedal bracket assy	脚踏支架总成	1
7--1	45500-018/006-01	Footpedal bracket	V1左右脚踏支架	1
7--2	80314-024-02	Hexagon socket head bolt M8X40	内六角圆柱头螺栓M8X40	2
7--3	80314-020	Hexagon socket head bolt M8X20	内六角圆柱头螺栓M8X20	2
7--4	80301-003	Spring washer $\phi 8*\phi 14*2.5$	弹垫 $\phi 8*\phi 14*2.5$	2
7--5	80302-005	Flat gasket $\phi 8*\phi 16*1.5$	平垫 $\phi 8*\phi 16*1.5$	2
8	80320-021	Outer hexagon small head flange bolts M8X105	外六角小头法兰螺栓 M8X105	1
9	80308-007	Flange nylon lock nut M8	法兰尼龙防松螺母M8	2
10	80320-024	Outer hexagon small head flange bolts M8X115	外六角小头法兰螺栓 M8X115	1

FigureH: frame, decorative strip, applique, etc（图H:后浮梁组件等）

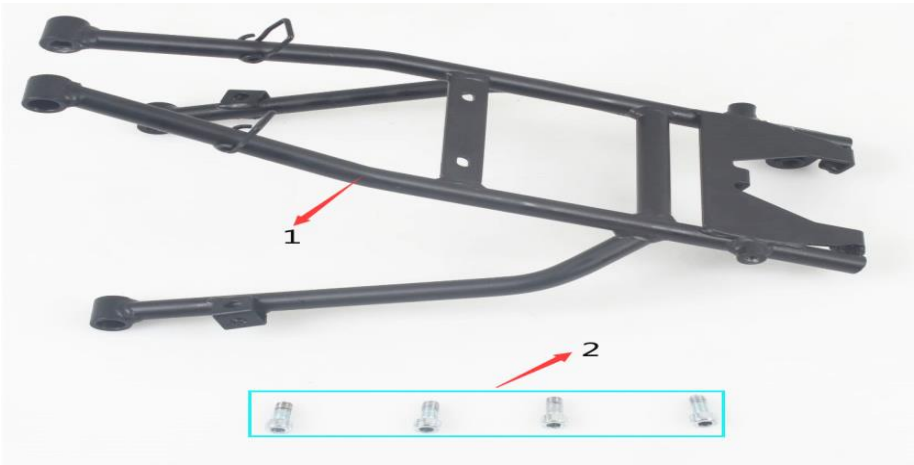


序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	45200-006-01	Sub-floating beam assy	V1S后浮梁总成	1
2	80314-020	Hexagon socket head bolt M8*20	内六角圆柱头螺栓M8X20	4

Figure I: battery, electrical appliances, trumpets, wires, etc.（图I:电器件等）

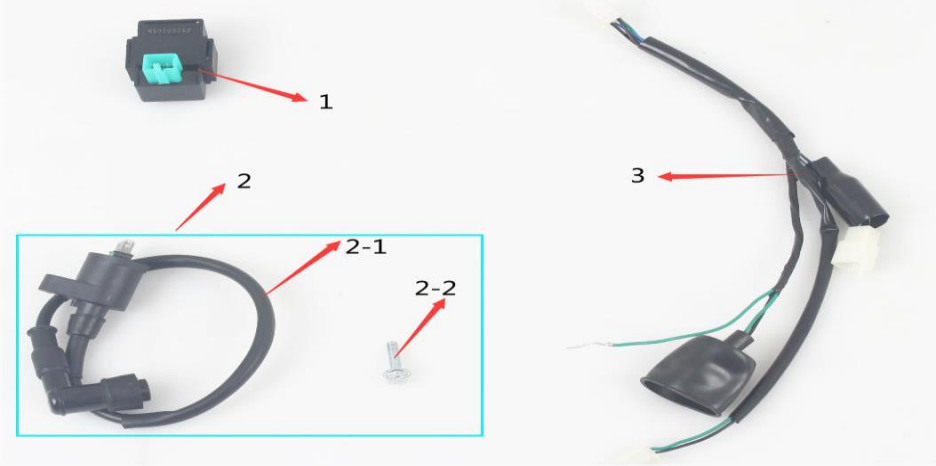


序号Sr.No	件号	rectifier	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	20301-014	CDI	点火器	1
2	20701-017	Lgnition coils assy	V1S 125豪迈高压包总成	1
2-1	20701-017-01	Lgnition coils	V1S 125豪迈高压包	1
2-2	80320-004	Lgnition coils bolt	外六角小头法兰三螺栓	1
3	20901-010	Kickstart wire	V1S脚启动线缆	1

ent, reflection lens, etc (图J: 联板总成等)

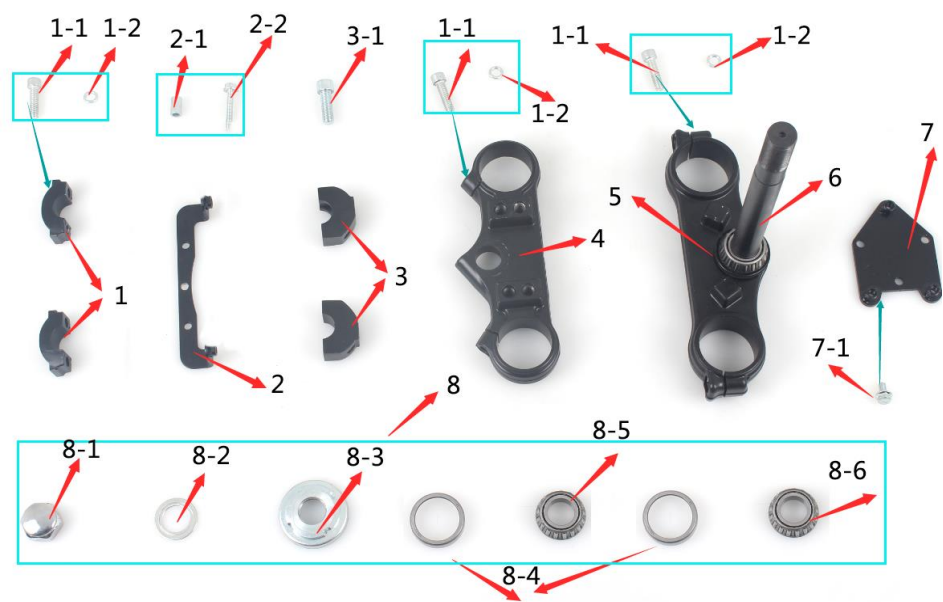

序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	NOTE
1	50103-004-02	Handle bar riser top	K2S上压块KTM	2
1-1	80314-022	Hexagon socket head bolt M8X30	内六角圆柱头螺栓M8X30	10
1-2	80301-003	Flat gasket φ8*14*2.5	弹垫 φ8*14*2.5	10
2	45600-006	Number plate bracket	V1面板支架	1
2-1	80201-011	Aluminum flat bush φ6*φ11*17	铝制平衬套 φ6*φ11*17	1
2-2	80320-004	Hexagon small head flange bolts	外六角小头法兰三螺栓	1
3	50104-004-02	Handle bar riser bottom	K2S下压块KTM	2
3-1	80314-037	Hexagon socket head bolt M10X30	内六角圆柱头螺栓M10X30	2
4	50101-006-02	Trigle clamp top	K2S上联板KTM	1
5	50102-007-02	Trigle clamp bottom	K2S下联板KTM	1
6	50106-005	Steering column	V1S方向柱	1
7	45600-013	Front fender bracket	V1前泥板支架	1
7-1	80320-001	Hexagon small head flange bolts	外六角小头法兰三螺栓	3
8	V1S-Figure J-8	Steering column bearing assembly	轴承档总成	1
8-1	50105-001	Steering stem top nut	大盖母	1
8-2	50105-006	Flat washer φ22*34*1	大平垫φ22*34*1	1
8-3	50105-003	lock nut	锁母	1
8-4	V1S-Figure J-8-4	Bearing steel bowl	轴承钢碗	2
8-5	80702-003	Needle bearing φ22	滚针轴承φ22	1
8-6	80702-004	Needle bearing φ23.5	滚针轴承φ23.5	1

Figure K: air filter, ECU, intake pipe, voltage regulator, EFI assembly, etc (图K: 塑料件等)

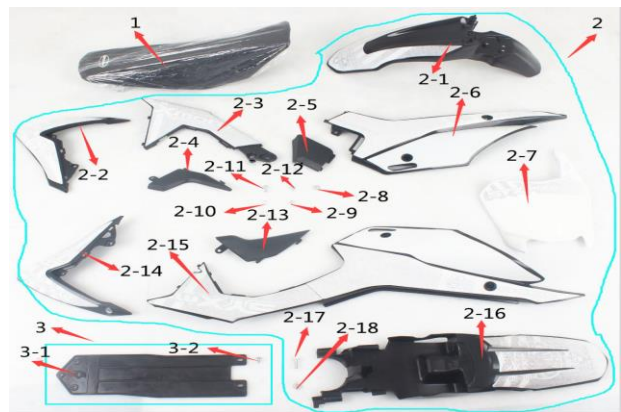

序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	70600-010	CRF110 seat assy	CRF110坐垫总成	1
2	V1S-Figure K-2	Plastic kits assy	塑料件总成	1
2--1	70104-002-05	CRF110 front fender	CRF110前泥板	1
2--2	70104-003-04	CRF110 Front-left guard	CRF110前左护板	1
2--3	70104-006-02	CRF110 Front-left-mid guard	CRF110前左中护板	1
2--4	70104-007	CRF110 Front-left-mid snap	CRF110前左中卡件	1
2--5	70104-009	CRF110 Front-left-rear snap	CRF110前左后卡件	1
2--6	70104-008-02	CRF110 Front-left-rear guard	CRF110前左后护板	1
2--7	70104-001	CRF110 Front number plate	CRF110前面板	1
2--8	80306-001	Hex flange nut M6	六角法兰螺母M6	2
2--9	80303-003	T sleeve gasket	T型冲压垫片	3
2--10	80311-009	Cross head tapping screws ST4.8*10	十字盘头自攻螺钉	8
2--11	80320-002	Hexagon small head range bolts M6X16	外六角小头法兰三螺栓	4
2--12	80320-001	Hexagon small head range bolts M6X12	外六角小头法兰三螺栓	5
2--13	70104-013	CRF110 front right snap	CRF110前右卡件	1
2--14	70104-010-04	CRF110 front right guard	CRF110前右护板	1
2--15	70104-014-02	CRF110 rear right guard	CRF110后右护板	1
2--16	70104-015-02	CRF110 rear fender	CRF110后尾板	1
2--17	80320-004	Hexagon small head range bolts M6X25	外六角小头法兰三螺栓	3
2--18	80303-003	T sleeve gasket	T型冲压垫片	3
3	V1S-Figure K-3	Mud guard assy	挡泥帘总成	1
3--1	80806-001	Mud guard	挡泥帘	1
3--2	80317-001	Hexagon socket large pan head bolt M6X12	内六角大盘头螺栓M6X12	2


Figure L: front tires, rims, front drum brake, front disc brake etc. (图L: 前后轮辋总成等)



序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	V1S-Figure L-1	Front wheels assy	前轮总成	1
1--1	31105-011	Front tire/inner tube	越野前轮内外胎	1
1--2	31100-010-02	Front rim assy	前轮辋总成	1
1--3	80101-027	Front axle	法兰轴M14X220x1.5	1
1--4	80201-098	Front axle spacer $\phi 15 \times \phi 22 \times 28$	平衬套 $\phi 15 \times \phi 22 \times 28$	1
1--5	80201-101	Front axle spacer $\phi 15 \times \phi 22 \times 31$	平衬套 $\phi 15 \times \phi 22 \times 31$	1
1--6	80308-010	Nut flanged locking	六角法兰尼龙防松螺母 M14X1.5	2
2	V1S-Figure L-2	Rear wheels assy	后轮总成	1
2--1	31205-008	Rear tire/inner tube	后轮内外胎	1
2--2	31200-013-02	Rear rim assy	后轮辋总成	1
2--3	80101-025	Rear axle	法兰轴M14X215x1.5	1
2--4	30302-005	Chain adjuster	钢制调链块	2
2--5	80201-101	Front axle spacer $\phi 15 \times \phi 22 \times 31$	平衬套 $\phi 15 \times \phi 22 \times 31$	1
2--6	80201-104	Front axle spacer $\phi 15 \times \phi 22 \times 38$	平衬套 $\phi 15 \times \phi 22 \times 38$	1
3	32101-005	Front brake disc	碟刹花盘 $\phi 76 \times \phi 220 \times H3.5$	1
3--1	32112-001	Brake disc bolt	内六角沉头台阶螺栓M8X20	4
4	32101-002	Rear brake disc	碟刹花盘 $\phi 76 \times \phi 190 \times H3.5$	1
4--1	32112-001	Brake disc bolt	内六角沉头台阶螺栓M8X20	4
5	V1S-Figure L-6-5	Sprocket assy	后链轮总成	1
5--1	30501-003	Sprocket 420-41T	钢制后链轮SY	1
5--2	80319-006	Sprocket bolt	外六角对边螺栓M8X25	4
5--3	80322-006	Sprocket locker	链轮锁片	2
6	V1S-Figure L-6	Rear brake assy	后单碟刹总成 安杰	1
6--1	32200-009	Rear brake	后单碟刹 安杰	1


6-2	V1S-Figure L-6-2	Rear brake bracket	后碟刹支架	1
6-3	32208-003	Brake pads	普通蹄块	2
6-4	80320-004	Rear brake bolt	外六角小头法兰螺栓 M6X25	3
6-5	80308-001-02	Rear brake nut	六角尼龙防松螺母M6	3
6-6	32204-004-02	Rear brake pump	后大单碟刹上泵	1
6-7	32206-007	Rear brake tube	后大单碟刹油管	1
7	32211-001	Rear brake pump guard	后碟刹上泵护罩	1
8	32210-001	Rear brake oil pipe clip	后碟刹油管夹	2
8-1	80314-009	Oil pipe clip bolt	内六角圆柱头螺栓M6X12	2

Figure M: front tires, rims, front drum brake, front disc brake etc. (图M: 脚踏、单撑组件)

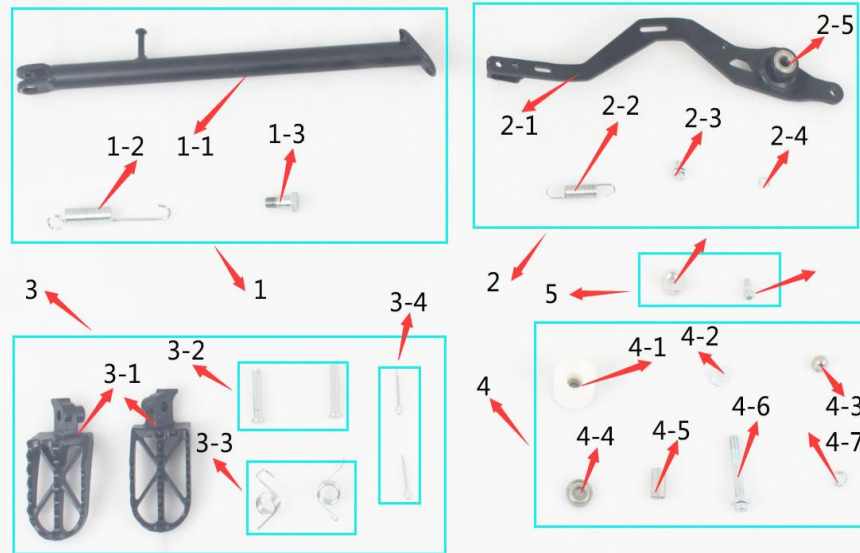

序号Sr.No	件号	英文名称	中文名称	单车用量
	Part No.	English Description	Chinese Description	
1	V1S-Figure M-1	Single stand assy	单撑组件	1
1-1	45400-005-01	Single stand	单撑	1
1-2	32402-001	Single stand spring	单撑簧	1
1-3	80322-001	Single stand bolt	外六角台阶螺栓M10*25	1
2	32300-001-04	Brake pedal assy	V系上走式制动踏板总成	1
2-1	32300-001-04-01	Brake pedal	V系上走式制动踏板	1
2-2	32403-001	Brake pedal spring	后制动拉簧	1
2-3	80320-001	Hexagon small head flange bolts	外六角小头法兰三螺栓 M6X25	1
2-4	80301-002	Spring washer $\phi 6$	弹垫 $\phi 6$	1
2-5	80701-002	Ball bearing 6900z	滚珠轴承6900Z	2
3	V1S-Figure M-3	Left&Right footpedal assy	左右脚踏组件	1
3-1	40603-001/002-01	Left&Right footpedal	左右铸钢脚踏	1
3-2	80401-002	Pin shaft $\phi 8 \times 42$	销轴 $\phi 8 \times 42$	2
3-3	32401-001/002	Left&Right footpedal sprig	左/右脚踏簧	1
3-4	80402-003	Split pin 2*35	开口销2*35	2
4	30304-011-05	Chain roller assy	凹型导链轮总成	1
4-1	30304-011-05-01	Chain roller	凹型导链轮	1
4-2	80302-005	Flat gasket $\phi 8$	平垫 $\phi 8$	1
4-3	80309-003	Hexagon Cap Nut	六角盖型螺母	1
4-4	80701-001	Ball bearing 608Z	滚珠轴承608Z	2
4-5	80201-028	Chain roller spacer	平衬套 $\phi 8 \times \phi 16 \times 3.5$	1
4-6	80320-015	Chain roller bolt	外六角小头法兰三螺栓 M6X25	1
4-7	80301-003	Spring washer	弹垫 $\phi 8 \times 14 \times 2.5$	1
5	V1S-Figure M-5	Hexagonal aluminum eccentric nut assy	六角铝制偏心螺母总成	1
5-1	80309-005	Hexagonal aluminum eccentric nut	六角铝制偏心螺母	1
5-2	80314-009	Hexagon socket head bolt M6X12	内六角圆柱头螺栓M6X12	1


Figure N: footpegs (图N: 贴花)

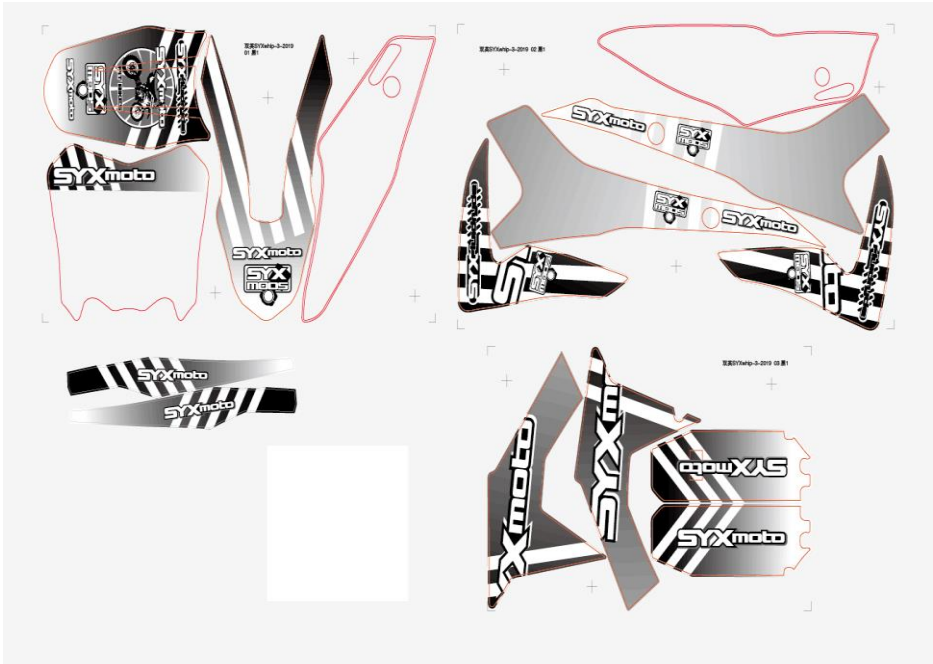


序号Sr.No	件号	英文名称	中文名称	单车用量
1	V1S-Figure N-1	PAD125-3 Graphic Black	PAD125-3全套贴花 黑色	1
2	V1S-Figure N-2	PAD125-3 Graphic Blue	PAD125-3全套贴花 蓝色	1
3	V1S-Figure N-3	PAD125-3 Graphic Pink	PAD125-3全套贴花 粉色	1

Figure 0: footpegs (图0: YX125发动机)

E-1	气缸组件 CYLINDER ASSY
E-2	气缸头 Cylinder Head
E-3	凸轮轴总成 CAMSHAFT ASSY
E-4	时规链 TIME CHAIN
E-5	左、右箱体 CRANKCASE
E-6	曲轴总成 CRANKSHAFT
E-7	右边盖 CRANKCASE COVER
E-8	左曲轴箱盖 磁电机 Left Crankcase Cover & Magnetio
E-9	离合器组件 CLUTCH COMPONENT PART
E-10	变速鼓组件 SHIFTING MOTIVATOR
E-11	起动轴组合 START ASSY
E-12	主、副轴组件 SLOWING DOWN SUBASSEMBLY
E-13	油泵总成 PUMP ASSY

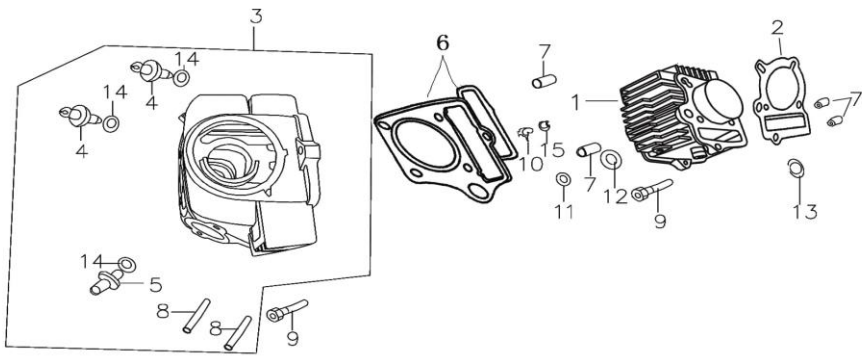


序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0293	YX普125【E1-1】气缸体/铝缸	2067A038PW	CYLINDER BODY
2	10114-0294	YX普125【E1-2】气缸体密封垫	206B010	CYLINDER BODY SEAL PACKING
3	10114-0295	YX普125【E1-3】气缸头组件/带内部附件/不带内部附件	215A000PW	CYLINDER HEAD ASSY
3A	10114-0296	YX普125【E1-3A】气缸头组件/光缸	215A000PW	
4	10114-0297	YX普125【E1-4】进气门导管	D00A001	SUCTION-VALVE PIPE
5	10114-0298	YX普125【E1-5】排气门导管	D00A002	EXHAUST VALVE PIPE
6	10114-0299	YX普125【E1-6】气缸头密封垫组件	206B008	CYLINDER HEAD SEAL GASKET
7	10114-0300	YX普125【E1-7】定位销 8×12	97108012	ASSEMBLING PIN 8 ×12
8	10114-0301	YX普125【E1-8】双头螺栓M6×38	208M036	BOLT M6×38
9	10114-0302	YX普125【E1-9】螺栓	GB5783	BOLT
10	10114-0303	YX普125【E1-10】衬套	D00L040	OIL SEAL
11	10114-0304	YX普125【E1-11】衬套	208-1-11	OIL SEAL
12	10114-0305	YX普125【E1-12】矩形密封圈	D00C031	RECTANGLE SEAL PING
13	10114-0306	YX普125【E1-13】矩形密封圈	D00L033	RECTANGLE SEAL PING
14	10114-0307	YX普125【E1-14】O 型密封圈	208-1-14	O SHAPED SEAL RING

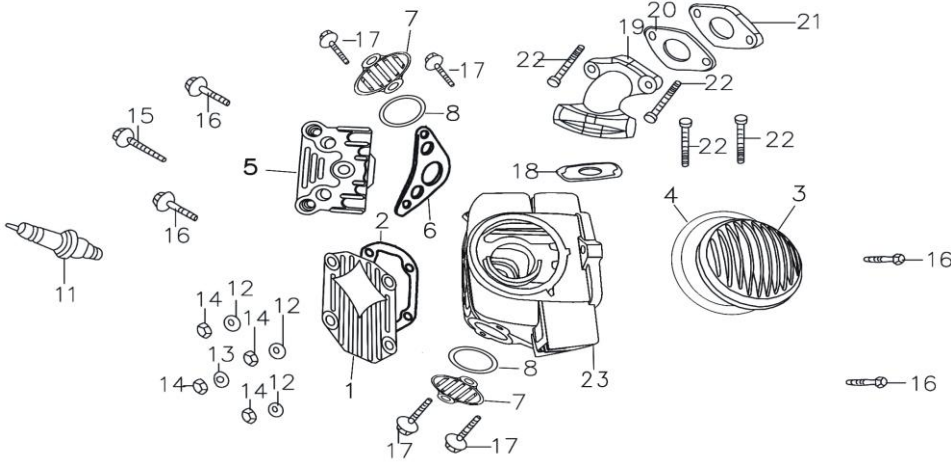

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0308	YX普125【E2-1】气缸头盖	206A036PW	CYLINDER HEAD COVER
2	10114-0309	YX普125【E2-2】气缸头盖密封垫	206B009	CYLINDER HEAD COVER SEAL PACKING
3	10114-0310	YX普125【E2-3】气缸头左盖	E03A033PW	CYLINDER HEAD LEFT COVER
3A	10114-0311	YX普125【E2-3A】气缸头左盖/镀铬	E03A033PW	
4	10114-0312	YX普125【E2-4】气缸头左盖密封圈	E03B006	CYLINDER HEAD LEFT COVER SEAL PACKING
5	10114-0313	YX普125【E2-5】气缸头右盖	E03A035PW	CYLINDER HEAD RIGHT COVER
6	10114-0314	YX普125【E2-6】气缸头右盖密封圈	D00B007	CYLINDER HEAD RIGHT COVER SEAL RING
7	10114-0315	YX普125【E2-7】气门盖	215A032PW	VALVA COVER
7A	10114-0316	YX普125【E2-7A】气门盖/镀铬	215A032PW	
8	10114-0317	YX普125【E2-8】气门盖密封圈	D001C058	SEAL FOR INTAKE VALVE
11	10114-0318	YX普125【E2-11】普通LG 火花塞	D00D021	LG/SPARKING PLUG
11A	10114-0319	YX普125【E2-11A】NGK普通火花塞不带	D00D021	
12	10114-0320	YX普125【E2-12】垫圈	E03L016	CUSHION RING


13	10114-0321	YX普125【E2-13】垫圈	E03L156	CUSHION RING
14	10114-0322	YX普125【E2-14】螺母	923070000LBX	NUT
15	10114-0323	YX普125【E2-15】螺栓	GB5787	BOLT
16	10114-0324	YX普125【E2-16】内六角螺栓	GB70	SCREW

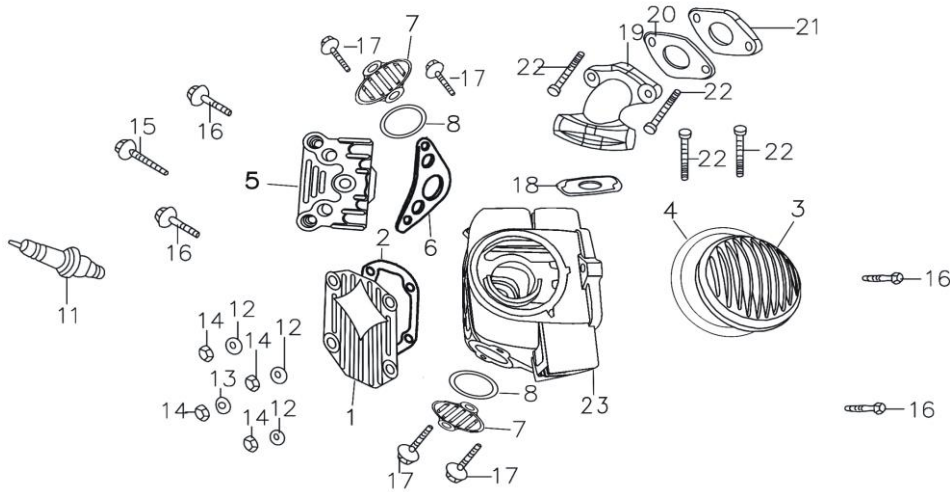


序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
17	10114-0325	YX普125【E2-17】带盘螺栓	96006016LBX	PLATE BOLT
18	10114-0326	YX普125【E2-18】进气管密封垫	D001B014	SEAL PACKING FOR THE INTAKE
19	10114-0327	YX普125【E2-19】进气管/YX02	L00JQ214PW	INTAKE
20	10114-0328	YX普125【E2-20】密封垫	204B030	SEAL PACKING
21	10114-0329	YX普125【E2-21】隔热垫	204C039	CARBURETOR SEAL PACKING
22	10114-0330	YX普125【E2-22】带盘螺栓	96006025LBX	PLATE BOLT
23	10114-0331	YX普125【E2-23】气缸头总成	*	CYLINDER HEAD ASSY

E-3


凸轮轴总成

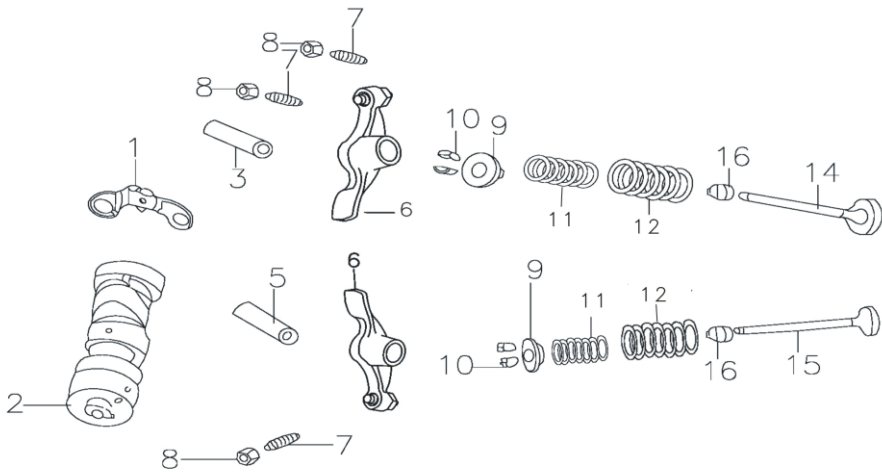

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0332	YX普125【E3-1】单向器锁止板组合	D00F013	ISOLATOR LOCKER ASSEMBLY
2	10114-0333	YX普125【E3-2】凸轮轴组件	D001F020	CAMSHAFT SUBASSEMBLY
3	10114-0334	YX普125【E3-3】进气摇臂轴	D00F015	AIR-IN ROCKERARM SHAFT
5	10114-0335	YX普125【E3-5】摇臂轴	D00F015	ROCKERARM SHAFT
6	10114-0336	YX普125【E3-6】气门摇臂	D00F000	ROCKER ARM, VALVE
7	10114-0337	YX普125【E3-7】气门调节螺钉	A00F001	AIR VALVE ADJUSTING SCREW
8	10114-0338	YX普125【E3-8】气门调节螺母	A00F002	AIR VALVE ADJUSTING NUT
9	10114-0339	YX普125【E3-9】气门内外弹簧座	D00F034	UP SPRING SEAT
10	10114-0340	YX普125【E3-10】气门锁夹	D00F033	AIR VALVE LOCKER
11	10114-0341	YX普125【E3-11】气门内弹簧	D00H004	INNER SPRING, VALVE
12	10114-0342	YX普125【E3-12】气门外弹簧	D00H003	OUTER SPRING, VALVE
14	10114-0343	YX普125【E3-14】进气门	204F045	INDUCTION VALVE
15	10114-0344	YX普125【E3-15】排气门	204F039	EXHAUST VALVE
16	10114-0345	YX普125【E3-16】油封	D00C043	VALVE STEM SEAL

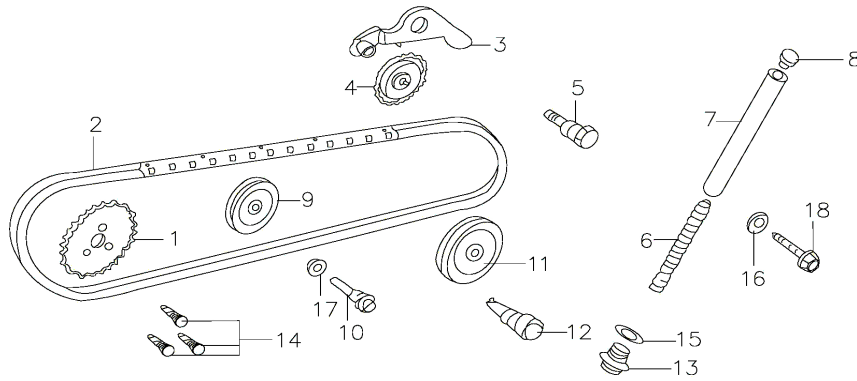


序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0346	YX普125【E4-1】正时从动链轮	E03F011	TIMING DRIVEN SPROCKET
2	10114-0347	YX普125【E4-2】正时链条	E03F012	TIMING CHAIN
3	10114-0348	YX普125【E4-3】链条张紧臂组件	D00F043	CHAIN TENSION ARM SUBASSEMBLY
4	10114-0349	YX普125【E4-4】链条张紧滚轮组合	D00C020	CHAIN TENSION CONTACT ROLLER ASSEMBLY
5	10114-0350	YX普125【E4-5】链条张紧臂芯轴	D00F044	CHAIN TENSION ARM MANDREL
6	10114-0351	YX普125【E4-6】链条张紧杆弹簧	D00H006	CHAIN TENSION STUD SPRING
7	10114-0352	YX普125【E4-7】链条张紧杆组件	D00F042	CHAIN TENSION STUD SUBASSEMBLY
8	10114-0353	YX普125【E4-8】链条张紧杆头	D00C022	CHAIN TENSION STUD HEAD
9	10114-0354	YX普125【E4-9】无芯导向轮	E03C023	GUIDE WHEEL WITHOUT CORE
10	10114-0355	YX普125【E4-10】导向滚轮销	D00F048	GUIDE ROLLER PIN
11	10114-0356	YX普125【E4-11】链条张紧滚轮 2	E04C021	CHAIN TENSION CONTACT ROLLER II
12	10114-0357	YX普125【E4-12】链条张紧滚轮 2 销	E04F041	CHAIN TENSION CONTACT ROLLER II PIN
13	10114-0358	YX普125【E4-13】密封螺栓	D00E025	SEAL BOLT
14	10114-0359	YX普125【E4-14】六角螺栓M5×12	578305012	BOLT M5×12
15	10114-0360	YX普125【E4-15】铝垫圈14	D00L021	ALUMINIUM WASHER 14
16	10114-0361	YX普125【E4-16】垫圈	208-4-16	WASHER
17	10114-0362	YX普125【E4-17】铝垫圈8	D00L019	ALUMINIUM WASHER 8
18	10114-0363	YX普125【E4-18】螺栓	D00L020	BOLT

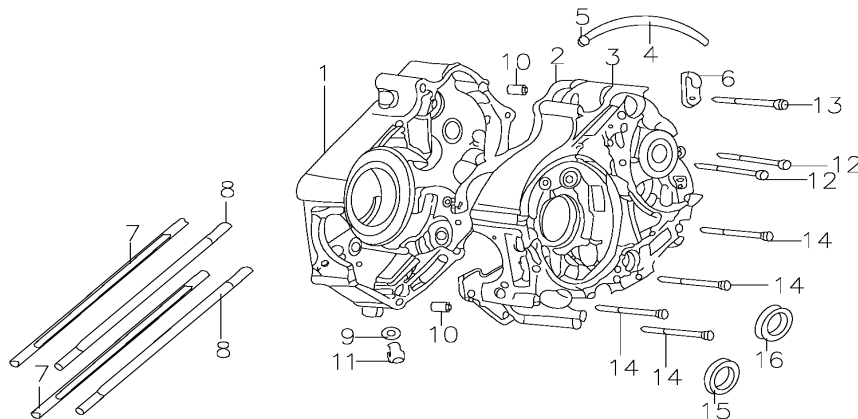

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0364	YX普125【E5-1】右曲轴箱体	203A020PW	RIGHT CRANKCASE BODY
2	10114-0365	YX普125【E5-2】曲轴箱密封垫	E04B005	CRANKCASE SEALED PACKING
3	10114-0366	YX普125【E5-3】左曲轴箱体	203A010PW	LEFT CRANKCASE BOGY
4	10114-0367	YX普125【E5-4】通气管	F00C024	BREATHING PIPE
5	10114-0368	YX普125【E5-5】溢流管夹	D00L014	OVERFLOW PIPE CLIP
6	10114-0369	YX普125【E5-6】高压线夹	D00L039BCR	PIPE CLAMPING
7	10114-0370	YX普125【E5-7】汽缸双头螺栓 A	206M001	CYLINDER TRAPPED STUD(A)
8	10114-0371	YX普125【E5-8】汽缸双头螺栓 B	206M002	CYLINDER TRAPPED STUD (B)
9	10114-0372	YX普125【E5-9】垫圈	D00L021	WASHER
10	10114-0373	YX普125【E5-10】定位销	97010014	ASTEMBLING PIN
11	10114-0374	YX普125【E5-11】放油螺栓	D00E026BX	DISCHARGING OIL PLUG SCREW
12	10114-0375	YX普125【E5-12】螺栓	GB5787	BOLT


13	10114-0376	YX普125【E5-13】螺栓	GB5787	BOLT
14	10114-0377	YX普125【E5-14】螺栓	GB5787	BOLT
15	10114-0378	YX普125【E5-15】油封	D001C008	WASHER
16	10114-0379	YX普125【E5-16】油封	D00C026	WASHER
E-6			曲轴总成	

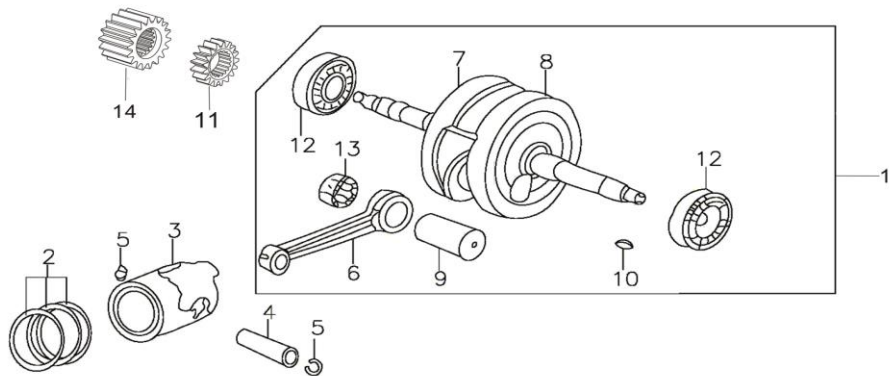

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0380	YX普125【E6-1】曲柄连杆组件	2154J000	CRANK CONNECTING ROD
2	10114-0381	YX普125【E6-2】活塞环组合	E001J013	PISTON RING SET
3	10114-0382	YX普125【E6-3】活塞	215J014	PISTON
4	10114-0383	YX普125【E6-4】活塞销	204J012	PISTON PIN
5	10114-0384	YX普125【E6-5】活塞销挡圈	204J011	PISTON PIN SHIELD RING
6	10114-0385	YX普125【E6-6】连杆	208J025	CONNECTING ROD LEVEL
7	10114-0386	YX普125【E6-7】右曲柄	208J005	RIGHT-HAND CRANKSHAFT
8	10114-0387	YX普125【E6-8】左曲柄	208J006	LEFT-HAND CRANK SHAFT
9	10114-0388	YX普125【E6-9】曲柄销	208J007	CRANK PIN
10	10114-0389	YX普125【E6-10】半圆链	208J001	SEMICIRCULAR KEY
11	10114-0390	YX普125【E6-11】油泵驱动齿轮	E13E023	OIL PUMP DRIVER GEAR
12	10114-0391	YX普125【E6-12】轴承	6304/P6	BEARING
13	10114-0392	YX普125【E6-13】连杆大头轴承	208J008	BEARING
14	10114-0393	YX普125【E6-14】主动齿轮	A00K015	PRIMARY DRIVER GEAR

E-7

右边盖

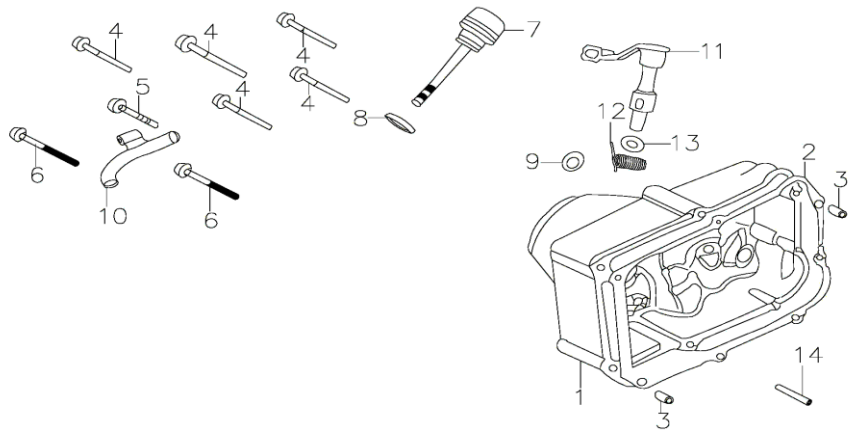


序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0394	YX普125【E7-1】右曲轴箱盖	D01A034PW	RIGHT CRANKCASE COVER
2	10114-0395	YX普125【E7-2】密封垫	E04B002	RIGHT CRANKCASE SEALED
3	10114-0396	YX普125【E7-3】定位销	97108012	PITCHED PIN
4	10114-0397	YX普125【E7-4】螺栓	GB5787	BOLT
5	10114-0398	YX普125【E7-5】螺栓	GB5787	BOLT
6	10114-0399	YX普125【E7-6】螺栓	GB5787	BOLT
7	10114-0400	YX普125【E7-7】机油标尺组合	D00C038	OIL SCALE ASSEMBLY
8	10114-0401	YX普125【E7-8】O型密封圈	D00C060	O-SHAPED SEALED RING
9	10114-0402	YX普125【E7-9】油封	D00C016	OIL SEAL
10	10114-0403	普125【E7-10】离合器拉索定位支	E13L031	CLUTCH CABLE CLIP
11	10114-0404	YX普125【E7-11】离合器操纵杆	E13G010BCR	CLUTCH CONTROL LEVER

12	10114-0405	YX普125【E7-12】操纵杆复位弹簧	E13H007	CONTROL LEVER RETURN SPRING
13	10114-0406	YX普125【E7-13】油封	F04C030	OIL SEAL
14	10114-0407	YX普125【E7-14】增油导管	208-7-14	OIL PIPE

E-8


左曲轴箱盖 磁电机

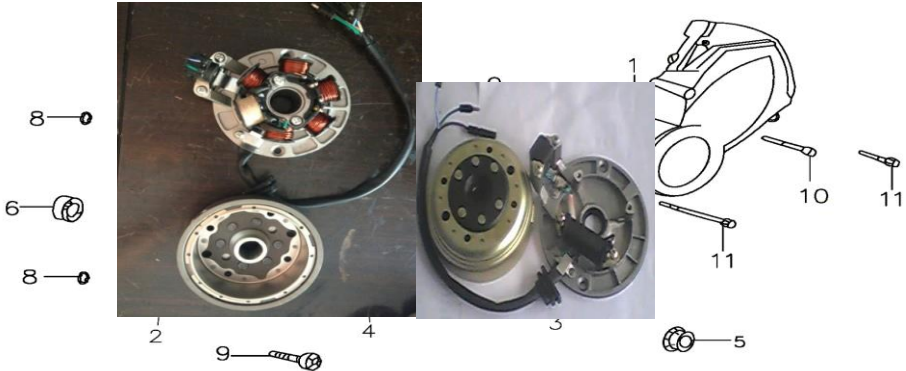

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0408	YX普125【E8-1】左边盖	A019A070PW	LEFT CRANKCASE COVER
2	10114-0409	YX普125【E8-2】磁电机总成普70		MAGNETON
3	10114-0410	YX普125【E8-3】磁电机转子普70	A018D060	FLYWHEEL
4	10114-0411	YX普125【E8-4】磁电机定子普70	A0229D070	STATOR MODULE
5	10114-0412	YX普125【E8-5】六角螺母	617710000BCR-1	HEX NUT
6	10114-0413	YX普125【E8-6】油封	D00C028	OILE SEAL
7	10114-0414	YX普125【E8-7】O型密封圈	D001C062	O-SHAPED SEAL
8	10114-0415	YX普125【E8-8】O型密封圈	F002C048	O-SHAPED SEAL
9	10114-0416	YX普125【E8-9】螺钉	GB818	BOLT
10	10114-0417	YX普125【E8-10】螺栓	GB5787	BOLT
11	10114-0418	YX普125【E8-11】螺栓	GB5787	BOLT

E-9


离合器组件

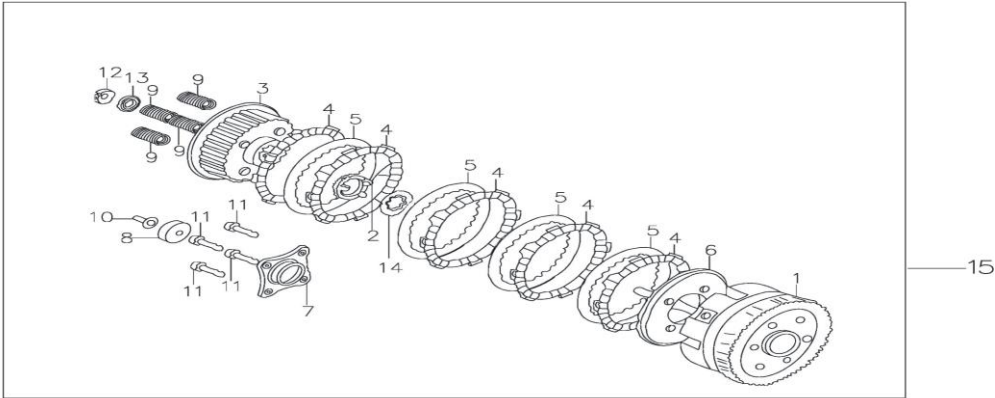

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0419	YX普125【E9-1】离合器外罩组合	208-9-1	CLUTCH EXTERNAL ASSY
2	10114-0420	YX普125【E9-2】定位环	208-9-2	HOLDING RING
3	10114-0421	YX普125【E9-3】离合器中心套	208-9-3	CENTRE OF CLUTCH COVER
4	10114-0422	YX普125【E9-4】离合器磨擦盘	208-9-4	CLUTCH FRICTION DISK
5	10114-0423	YX普125【E9-5】离合器板	208-9-5	CLUTCH BOARD
6	10114-0424	YX普125【E9-6】离合器压盘	208-9-6	CLUTCH PRESSURE PLATE
7	10114-0425	YX普125【E9-7】离合器升板	208-9-7	CLUTCH LIFT SLAB
8	10114-0426	YX普125【E9-8】轴承	208-9-8	BEARING
9	10114-0427	YX普125【E9-9】离合器弹簧	208-9-9	CLUTCH SPRING
10	10114-0428	YX普125【E9-10】离合器推杆	208-9-10	CLUTCH PUSH ROD
11	10114-0429	YX普125【E9-11】螺栓	208-9-11	BOLT
12	10114-0430	YX普125【E9-12】圆螺母	208-9-12	ROUND NUT
13	10114-0431	YX普125【E9-13】碟型垫圈	208-9-13	DISK SHAPED WASHER
14	10114-0432	YX普125【E9-14】花键垫圈	208-9-14	SPLINE SHAFT WASHER
15	10114-0433	YX普125【E9-15】离合器总成/手离	200G060	CLUTCH ASSEMBLY

E-10


变速鼓组件

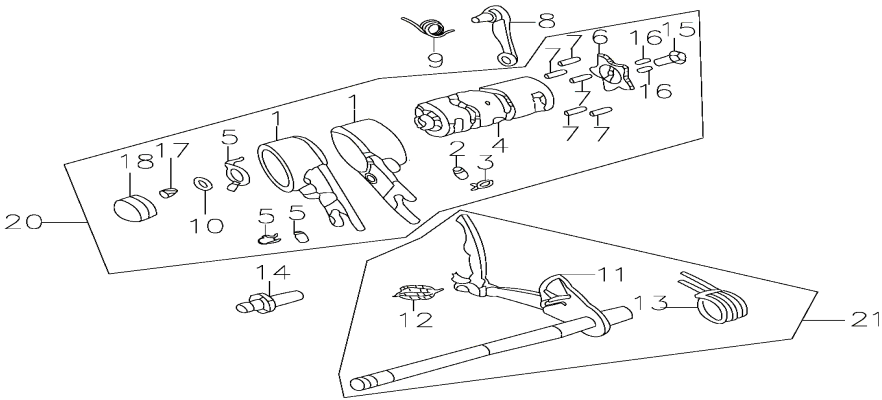

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0434	YX普125【E10-1】齿轮拨叉	208-10-1	GEAR SHIFT FORK
2	10114-0435	YX普125【E10-2】导向销	208-10-2	GUIDE PIN
3	10114-0436	YX普125【E10-3】弹簧夹	208-10-3	SPRING CLIP
4	10114-0437	YX普125【E10-4】变速鼓	A004K060	SHIFTING DRUM
5	10114-0438	YX普125【E10-5】空档开关接触片	A00D010	NEUTRAL GEAR SWITCH CONTACT
6	10114-0439	YX普125【E10-6】五星板	A00K023	SPEED VARIATOR STRONGBACSTRONGBACK PIN
7	10114-0440	YX普125【E10-7】定位板销钉	208-10-7	STRONGBACK PIN BOLT
8	10114-0441	YX普125【E10-8】变速鼓定位板组件	D05K070	SPEED VARIATOR STRONGBACK SUBASSEMBLY
9	10114-0442	YX普125【E10-9】定位板弹簧	D00H009	STRONGBACK SPRING
10	10114-0443	YX普125【E10-10】垫圈	A00K062	WASHER
11	10114-0444	YX普125【E10-11】变档轴	208-10-11	SHIFTING SUBASSEMBLY
12	10114-0445	YX普125【E10-12】弹簧	208-10-12	SPRING
13	10114-0446	YX普125【E10-13】复位弹簧	208-10-13	RETURN SPRING
14	10114-0447	YX普125【E10-14】定位螺栓	D00K024	ASSEMBLING SPING
15	10114-0448	YX普125【E10-15】带盘螺栓	GB5787	BOLT WITH SALVER
16	10114-0449	YX普125【E10-16】定位销	208-10-16	ASSEMBLING PIN

E-10


变速鼓组件

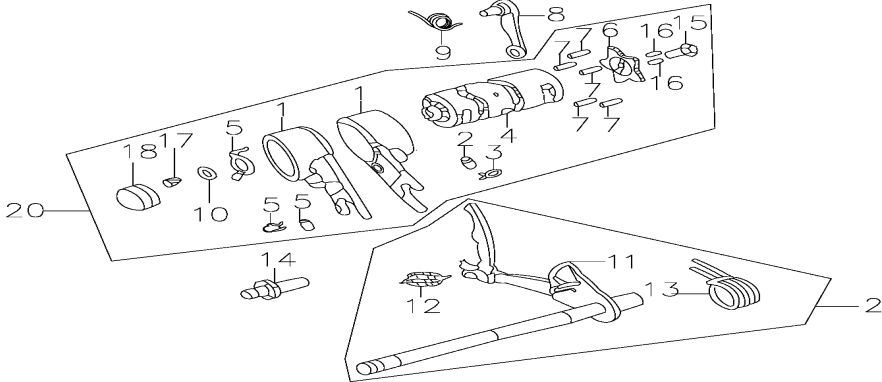

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
17	10114-0450	YX普125【E10-17】开关压板	A00L033	SWITCH PRESSBOARD
18	10114-0451	YX普125【E10-18】动触头组合	A00K082	MOVING CONTACT SUBASSEMBLY
19	10114-0452	YX普125【E10-19】内六角螺栓	208-10-19	SOCKET HEAD CAP SCREW
20	10114-0453	YX普125【E10-20】变速鼓组合	A004K060	SHIFTING YOKE VARIATOR
21	10114-0454	YX普125【E10-21】换档臂组件	C03K000	SHIFTING SUBASSEMBLY

E-11


起动轴组合

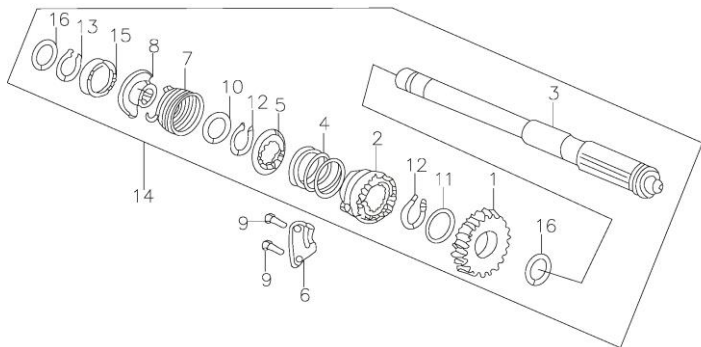


序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0455	YX普125【E11-1】 起动齿轮	208K025	START GEAR
2	10114-0456	YX普125【E11-2】 起动棘轮	208-11-2	STARTING RATCHET WHEEL
3	10114-0457	YX普125【E11-3】 起动轴	208-11-3	STARTING SHAFT
4	10114-0458	YX普125【E11-4】 弹簧	208-11-4	SPRING
5	10114-0459	YX普125【E11-5】 棘轮弹簧座	208-11-5	RATCHET WHEEL SPRINGS SUPPORTING
6	10114-0460	YX普125【E11-6】 棘轮导向板	208-11-6	RATCHET WHEEL GUIDE RUNNER
7	10114-0461	YX普125【E11-7】 起动轴复位弹簧	208-11-7	STARTING SHAFT RETURN SPRING
8	10114-0462	YX普125【E11-8】 起动轴弹簧座	208-11-8	STARTING SHAFT SPRING SUPPORTING
9	10114-0463	YX普125【E11-9】 螺栓	GB5783	BOLT
10	10114-0464	YX普125【E11-10】 垫圈	208-11-10	WASHER
11	10114-0465	YX普125【E11-11】 垫圈	208-11-11	WASHER
12	10114-0466	YX普125【E11-12】 垫圈	208-11-12	WASHER
13	10114-0467	YX普125【E11-13】 护挡圈	208-11-13	SHIELD RING
14	10114-0468	YX普125【E11-14】 起动轴组合	D011I000	STARTING SHAFT ASSEMBLY
15	10114-0469	YX普125【E11-15】 弹簧盖	208-11-15	SPRING COVER
16	10114-0470	YX普125【E11-16】 垫圈	208-11-16	WASHER

E-12


主、副轴组件

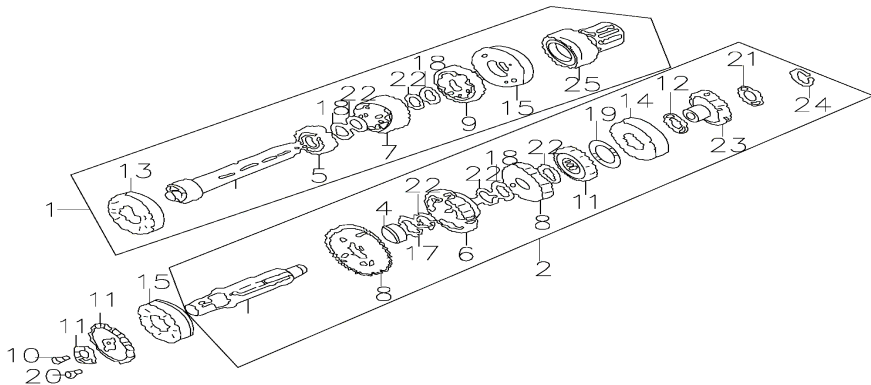

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0471	YX普125【E12-1】 传动主轴 (不含轴承)	E05K030	TRANSMISSION MMAIN SHAFT
2	10114-0472	YX普125【E12-2】 传动副轴 (不含轴承)	A001K040	TRANSMISSION COUNTENSHAFT
3	10114-0473	YX普125【E12-3】 齿轮	208-12-3	GEAR WHEEL
4	10114-0474	YX普125【E12-4】 齿轮套	208-12-4	GEARED SLEEVE
5	10114-0475	YX普125【E12-5】 齿轮	208-12-5	GEAR WHEEL
6	10114-0476	YX普125【E12-6】 花键从动齿轮	208-12-6	SPLINE SHAFT DRIVER GEAR
7	10114-0477	YX普125【E12-7】 花键主动齿轮	208-12-7	SPLINE SHAFT MAIN DRIVEN GEAR
8	10114-0478	YX普125【E12-8】 齿轮	208-12-8	GEAR WHEEL
9	10114-0479	YX普125【E12-9】 齿轮	208-12-9	GEAR WHEEL
10	10114-0480	YX普125【E12-10】 花键齿轮	208-12-10	SPLINE SHAFT GEAR WHEEL
11	10114-0481	YX普125【E12-11】 主动链轮	A00K014	DRIVE SPROCKET
12	10114-0482	YX普125【E12-12】 主动链轮卡圈	208-12-12	SRIVE SPROCKET CLOSING RING
13	10114-0483	YX普125【E12-13】 轴承	6001	BEARING
14	10114-0484	YX普125【E12-14】 轴承	6002	BEARING
15	10114-0485	YX普125【E12-15】 轴承	6203	BEARING
16	10114-0486	YX普125【E12-16】 推力垫圈	208-12-16	THRUST WASHER

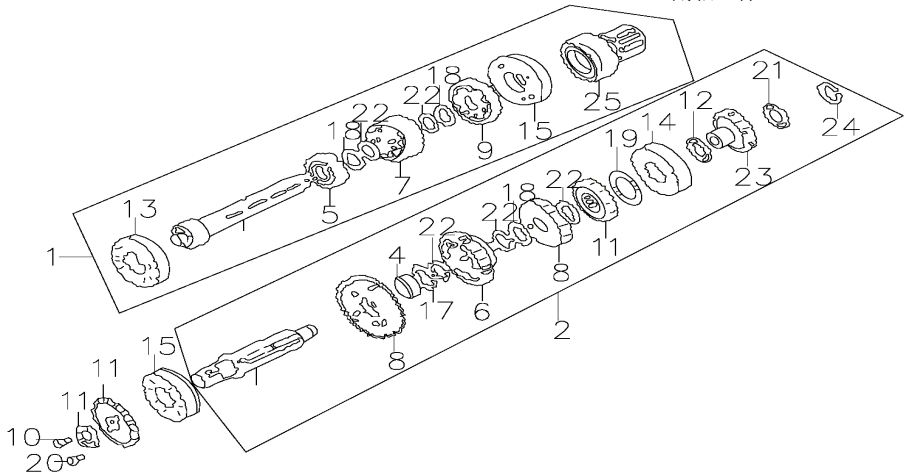

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
17	10114-0487	YX普125【E12-17】花键垫圈	208-12-17	SPLINE SHAFT WASHER
18	10114-0488	YX普125【E12-18】花键垫圈	208-12-18	SPLING SHAFT WASHER
19	10114-0489	YX普125【E12-19】花键垫圈	208-12-19	SPLING SHAFT WASHER
20	10114-0490	YX普125【E12-20】螺栓	208-12-20	BOLT
21	10114-0491	YX普125【E12-21】推力垫圈	208-12-21	SPLING SHAFT WASHER
22	10114-0492	YX普125【E12-22】挡圈	208-12-22	SHIELD RING
23	10114-0493	YX普125【E12-23】起动过桥齿轮	208-12-23	STAR ROLLING GEAR
24	10114-0494	YX普125【E12-24】挡圈 15	208-12-24	SHIELD RING
25	10114-0495	YX普125【E12-25】离合器齿轮套	208-12-25	CLITCH GEAR SLEEVE
E-13		油泵总成		

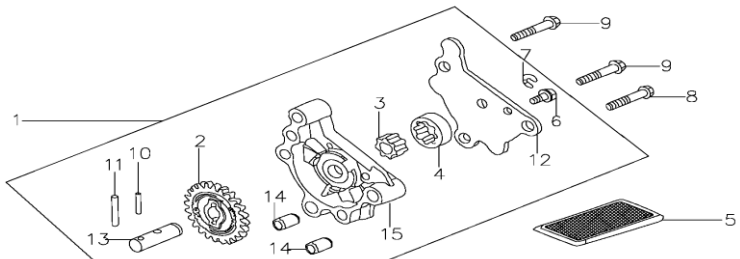

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	10114-0496	YX普125【E13-1】机油泵部件	2001E000/	OIL PUMP COMPONENTS
2	10114-0497	YX普125【E13-2】油泵从动齿轮	208-13-2	OIL PUMP DRIVER GEAR
3	10114-0498	YX普125【E13-3】油泵内转子	208-13-3	OIL PUMP INNER ROTOR
4	10114-0499	YX普125【E13-4】油泵外转子	208-13-4	OIL PUMP OUTER ROTOR
5	10114-0500	YX普125【E13-5】机油过滤网组件	D00C037	OIL FILTER SUBASSEMBLY
6	10114-0501	YX普125【E13-6】带盘螺栓	208-13-6	PLATE BOLT
7	10114-0502	YX普125【E13-7】挡圈	208-13-7	SHIELD RING
8	10114-0503	YX普125【E13-8】带盘螺栓	GB5783	BOLT WITH SALVER
9	10114-0504	YX普125【E13-9】带盘螺栓	GB5783	BOLT WITH SALVER
10	10114-0505	YX普125【E13-10】销轴	208-13-10	PIN BEARING
11	10114-0506	YX普125【E13-11】销轴	208-13-11	PIN BEARING
12	10114-0507	YX普125【E13-12】油泵盖	208-13-12	OIL PUMP COVER
13	10114-0508	YX普125【E13-13】油泵轴	208-13-13	OIL PUMP AXIS
14	10114-0509	YX普125【E13-14】定位销	208-13-14	ASSEMBLING PIN
15	10114-0510	YX普125【E13-15】油泵体	208-13-15	OIL PUMP BODY

序号 Ref. No.	ERP编码	中文名称 (CHINESE DESCRIPTION)	零部件编码 Part No.	Description
1	V1S-Figure 0-FGST	YX125全套纸垫		Full set YX125 gasket